

Managed Ethernet Switch Web-Based Configuration Guide

The software version for this manual is: Release 7.1.x

Document Version: V4.0

Models Covered by This Manual

RP-IGS65000 series:	RP-IGS65168IX-4FR
RP-ISG6300 series:	RP-ISG6304-2F
RP-ISG3200 series:	RP-ISG3204I-2F
RP-IPG6500 series:	RP-IPG6508IX-8F
RP-IPG6300 series:	RP-IPG6316IX-2F, RP-IPG6316I-2F, RP-IPG6308IX-8F, RP-IPG6308I-8F,
RP-IPG6200 series:	RP-IPG6208I-2F, RP-IPG6204I-2F
RP-IPG3200 series:	RP-IPG3204I-2F, RP-IPG3208I-2F
RP-IPG65000 series:	RP-IPG65240IX-4FR, RP-IPG65168IX-4FR
RP-IPG63000 series:	RP-IPG63240I-4FR, RP-IPG63240IX-4FR, RP-IPG63168I-4FR,
	RP-IPG63168IX-4FR
RP-G8000 series	RP-G8210I-2F, RP-G83168I-4F, RP-G83240I-4F, RP-G83240IX-4F,
	RP-G83480IX-4F
RP-GS8000 series	RP-G\$8320I-8GC, RP-G\$8320IX-8GC
RP-PG8000 series	RP-PG8210I-2F, RP-PG83168I-4F, RP-PG83240I-4F, RP-PG83240IX-4F,
	RP-PG83480IX-4F



Content	5
1.1 Brief	5
1.2 Logging in to the Web interface	5
1.3 Logging out of the Web interface	6
1.5 Reboot	6
1.6 Introduction to the Web interface	7
1.7 Introduction to the Web-based functions	8
2 Monitor	11
2.1 Overview	
2.2 Port Statistics	
2.3 Loop Protection	
2.4 Serial Server State	
2.5 Security	
2.6 PoE State	
2.7 LLDP State	
2.8 IGMP Snooping State	
2.9 DHCP Snooping State	
2.10 QinQ Information	
2.11 LoopDetect State	
2.12 ARP Information	
3 Configuration	
3.1 VLAN	
3.1.1 Introduction	
3.1.2 Configuring VLAN	
3.2 Port	
3.2.1 Port Configuration	
3.2.2 Port Extension	
3.2.3 Port Mirroring	
3.2.4 Port Aggregation	
3.2.5 Port Violation	
3.3 Spanning Tree	
3.3.1 Overview	
3.3.2 Spanning Tree Configuring	
3.4 ERPS	
3.4.1 Overview	
3.4.2 Configure the ERPS	
3.5 PoE Management	
3.5.1 PoE Overview	



3.5.2 PoE Configuration	
3.6 Security	
3.6.1 Port Security	
3.6.2 IP Source Guard	
3.6.3 Dot1X	
3.6.4 MAC Auth	
3.6.5 RADIUS	
3.7 Control	
3.7.1 Serial Servers	
3.7.2 IO Control	
3.8 LoopDetect	
3.8.1 Overview	
3.8.2 Configuring LoopDetect	
4 Advance	70
4.1 LLDP	
4.1.1 Overview	
4.1.2 Configuring LLDP	
4.2 IGMP Snooping	74
4.2.1 Principle of IGMP snooping	
4.2.2 Configure the IGMP Snooping	
4.3 MAC Management	
4.3.1 Overview	
4.3.2 Configuring MAC addresses	
4.4 DHCP Snooping	
4.4.1 Overview	
4.4.2 Configuring DHCP Snooping	
4.5 QinQ	
4.5.1 Overview	
4.5.2 QinQ configuration	
4.6 ACL	
4.6.1 Overview	
4.6.2 Configuring Acls	
4.7 QoS	
4.7.1 Overview	
4.7.2 Configuring Qos	
4.8 Route	
4.8.1 ARP	
4.8.2 Route	



5 Maintenance	
5.1 System Configuration	
5.1.1 Host name settings	
5.1.2 Services Enable	
5.1.3 Management IP	
5.2 File Management	
5.2.1 Basic Information	
5.2.2 Image Management	
5.2.3 Configuration Management	
5.2.4 Configuration Management	
5.2.5 Page Package Management	
5.3 User Management	
5.4 Time Management	
5.4.1 View the system time	
5.4.2 Configuring System Time	
5.4.3 Configuring NTP Server	
5.5 SNMP	
6 Diagnosis	
6.1 Network Utilities	
6.1.1 Overview	
6.1.2 Diagnostic tool operations	
6.2 Optical Transceiver Information	
6.2.1 Displaying Optical Transceiver Information	
6.2.2 Displaying detail information	
6.3 One-click Collection	
6.4 Dying Gasp	
6.4.1 Overview	
6.4.2 Configuring Dying Gasp	
6.5 Cable Detect	



1 Web Overview

1.1 Brief

The device provides the Web-based network management function to facilitate the operations and maintenance on devices. Through this function, the administrator can visually manage and maintain network devices through the Web-based configuration interfaces. Figure 1-1 shows a Web-based network management operating environment:

Figure 1-1 Web-based network management operating environment



1.2 Logging in to the Web interface

The device is provided with the default Web login information. You can use the following default information to log in to the Web interface:

- Username: 'admin'
- Password: 'admin'
- IP address of the device: '192.168.56.166'

To log in to the device through the Web interface:

- 1. Connect the Ethernet interface of the device to the PC using a crossover Ethernet cable.
- 2. Configure an IP address for the PC and ensure that the PC and device can communicate with each other properly.
- 3. Modify the IP address of the PC to one that within the network segment 192.168.56.0/24 (except for 192.168.56.166), for example, 192.168.56.2.
- 4. Open the browser, and input the login information.
- On the PC, open the browser, type the IP address http://192.168.56.166 in the address bar, press Enter and you can enter the login page of the Web interface, as shown in Figure 1-2. Input the username admin and password admin, and click Login.



• For better display results, please use edge, chrome, Firefox browsers, other browsers may have compatibility issues.

Figure 1-2 Login page of the Web interface



Managed Ethernet Switch

८ Username	
🔒 Password	ø
l og In	Clear

1.3 Logging out of the Web interface

Click **Logout** button in Auxiliary area to quit Web-based network management, as shown in Figure 1-3. The system does not save the current configuration before you log out of the Web interface. Therefore, we recommend that you save the current configuration before logout.

Figure 1-3 logging out of Web interface



NOTE:

• You cannot log out by directly closing the browser.

1.4 Save Configuration

The save configuration module provides the function to save the current configuration to the configuration file for the next startup.

Click the **Save** button in Auxiliary area to save the current configuration to the configuration file, as shown in Figure 1-4.



1.5 Reboot



NOTE:

F

• Before rebooting the device, save the configuration; otherwise, all unsaved configurations are lost after device reboot. After the device reboots, you must re-log in to the Web interface.

Click **Reboot** button in Auxiliary area to reboot the device, as shown in Figure 1-5.

Figure 1-5 Reboot Configuration



1.6 Introduction to the Web interface

The Web interface is composed of three parts: navigation area, auxiliary area, and body area, as shown in Figure 1-6.

Figure 1-6 Web-based configuration interface

Overview					17
rt Statistics	System Information		CPU	Memory	
C Statistics	Product ID: Manage	ed Ethernet Switch			
op Protection	Product SN: 202208	080001	142		
urity	3 MAC Address: 78-D0-4	44-55-32-07			32.88%
P State	Hardware Version: 1.0		99%	67.12%	
CP Snooping State	Software Version: release/	/6.0.0 (r486 7006243) 2022-08-20 11:13:16			
Q Information	Uptime: 3 min				
nfiguration ~					
rance ~	Selected 1 AG Port 1 Trunk F	Port 🦰 Up 🦳 Shutdown			Copper 🛄 Fi
intenance 🗸 🗸	8 	6 4 2 ነ በጉነ በጉነ			
gnosis ~		,			
1	10 5 7				
	Traffic gigabitEthernet0/1	∨ Kbps ∨			≫ Port Configurat
	Kbps	-	-O- Tx Traffic -O- Rx Traffic		
	0.5	• •	•	0	
	0.4				
	0.3				
	0.2				
	0.1				
	0				Tin

(1) Navigation area	(2) Auxiliary area	(3) Body area
---------------------	--------------------	---------------



- Navigation area: Organizes the Web-based NM function menus in the form of a navigation area where you can select function menus as needed. The result is displayed in the body area. The Web network management functions not supported by the device are not displayed in the navigation area.
- Auxiliary area: The area where you can search, alarm message prompt, save, exit, restart device and other operations.
- Body area: The area where you can configure and display a function.

1.7 Introduction to the Web-based functions

Table 1-1 describes the Web-based network management functions in detail.

Table 1-1 Description of Web-based functions

Menu/ tab			Function Description		
	Overview		Display the device's MAC address, serial number, software and hardware version, CPU usage, operating Status such as uptime, display the link status of the port, and the flow of the port.		
	Port statist	ics	Display the count of ports		
	Loop prot	ection	Displays the loop protection status of the device		
Monitor	Security		Displays the security class related status of the device		
Serial serve LLDP Statu IGMP Snoc	er state	Display the working status of the serial port server of the device			
	LLDP Status		Display the LLDP working status of the device		
	IGMP Snooping State		Display device IGMP Snooping status		
	DHCP Snooping State		Display the DHCP snooping status of the device		
	QinQ infor	mation	Display device QinQ status		
	VLAN		Create, modify, and delete VLANs, configure port attributes, and VLAN attribution		
Configurati on	Port	port configuration	Set port related properties		
		port extension	Set port rate limit, storm suppression, port isolation		
		port mirroring	Add/remove mirroring of ports		
		Port aggregation	Add/delete aggregation port		



	Spanning tree ERPS PoE		Set STP, RSTP, MSTP functions	
			Set ERPS single ring, tangent ring, intersecting ring	
			Set PoE power, non-standard mode. Enable/disable PoE port power supply	
		port security	Configure and delete the port security function	
		IP Source Guard	Configure and delete the IP Source Guard function	
	Security	Dot1x	Configuring 802.1X Authentication	
		MAC authentication	Configuring MAC Authentication Profiles	
		RADIUS	Configure the RADIUS server	
	Control	Serial Server	Configure serial server	
		IO control	Configure DI, DO	
Advance	Layer 2	LLDP configuration	Configure and delete the LLDP function of the device	
		IGMP Snooping Configuration	Display/Configure IGMP Snooping	
		MAC configuration	Configure the MAC address management mode of the device	
		DHCP Snooping Configuration	Configuring DHCP Snooping on the Device	
		QinQ configuration	Configure the QinQ function of the device	
	Security	ACL configuration	Configuring the ACL function of the device	
		QoS configuration	Configure the QoS function of the device	
	System Configuration		Set the electronic label of the device, enable/disable telnet, ssh, http, https functions, Set management IP	
Maintaince -	File Management		Firmware upgrade management, configuration management, certificate management, page package management	



	User Management	Create/delete users, set user passwords
	Time Management	Display/set system current date and time
	SNMP	Create, modify, delete SNMP configuration
	Network Utility	Execute ping/trace route operation and display the execution result
Diagnosis	Transceiver Information	View optical module information, such as manufacturer information, serial number, optical power, etc.
	One-click collection	Generate a diagnostic information file and open the file for viewing or saving to the local host
	Dying gasp	Enable/disable the power failure alarm function of dying gasp



2 Monitor

2.1 Overview

Select **Monitor** > **Overview** from the navigation tree to enter the overview page. As shown in Figure 2-1, The overview page is divided into 3 sections, namely "System Information", "Panel Port", and "Traffic".

1. In the "**System Information**" page, you can see the product ID, serial number, MAC address, hardware and software version of the device, the specific parameters are described as shown in Table 2-1.



rabiez i basie internation contigeration norther	Table2-1	Basic	Information	configuratio	n items
--	----------	-------	-------------	--------------	---------

Item	Description
Host Name	Displays the device name. Allows user to change it.
MAC Address	Displays the device's MAC address.
Hardware Version	Displays the device's hardware version.
Software Version	Displays the device's software version.



Release Date	Displays the device software's release date.
Product SN	Displays the device's serial number.
CPU Used	Displays the device's cpu status.
Memory Avail	Displays the device's memory status.
System Uptime	Displays the time from last system start.

2. In the "**Panel Ports**" page, you can see the panel diagram of the device and the working conditions of the panel ports.

3. In the "Traffic" page, you can observe the traffic situation of the port.

2.2 Port Statistics

The port statistics module displays statistics about the packets received and sent through interfaces.

Displaying port statistics

Select **Monitor** > **Port Statistics** in the navigation area to enter the page shown in Figure 2-2. The page displays the port's Rx Load, Tx Load, Speed, Under size, Over size, CRC Error, Collision Count. Table 2-2 describes the items of port statistics.

Figure 2-2 port statistics page

Port Statistics								~ 3
Clear Auto Refresh								<u>iguration</u>
Port 🚖	Rx Load 👙	Tx Load 👙	Speed	Under Size	Over Size	CRC Error	Collision Count	Action
gigabitEthernet0/1	0 %	0 %	1000M	0	0	0	0	<u>Clear</u>

Item	Description
Port	The name of the logical interface.
Rx Load	The port receives the load rate
Tx Load	The port sends the load rate
Speed	The port operating rate
Under Size	The number of packets received by the port is less than 64 bytes
Over Size	The number of packets received by the port is greater than the maximum MTU configuration
CRC Error	The number of packets received of CRC checking error
Collision Count	The number of conflicting packets received by the port
Clear	Click to clear the statistics.

Table 2-2 Items of port statistics



2.3 Loop Protection

The "Loop Protection" page is used to display the working status of device loop-related protocols, such as ERPS and Spanning Tree protocols.

1. Select **Monitor** > **Loop Protection** in the navigation area to enter the loop protection status page, as shown in Figure 2-3.

2. You can see the working status of the ERPS and Spanning Tree Protocol that have been enabled, and the specific parameters can be described in the relevant sections of the protocol.

3. Click the **ERPS Configuration** and **Spanning Tree Configuration** buttons to directly switch to the relevant configuration interface.

Figure 2-3 Loop Protection status

Loop Prote	ection							0	~ 3
Auto Ref	iresh 🔵							» ERPS Configu	ration
Name	Ring II		State	Last Ev	ent Eas	t Interface	West Interface	Action	n
					No Data				
								ing Tree Configu	ration
Auto Ref	resn						<u> ≫ span</u> r	<u>ling free Conligu</u>	rauon
Name	Instance	Version	Role	State	Root Bridge ID	Region Root Brid	ge ID Designate	Bridge ID /	Action

No Data

2.4 Serial Server State

The "Serial Server State" page is used to display the working status of Serial Server.

1. Select **Monitor** > **Serial Server State** in the navigation area to enter the Serial Server State page, as shown in Figure 2-4.

Figure 2-4 Serial Server status

Seria	l Server									
Statis	stics									
Auto	o Refresh 🔵									» <u>Configuration</u>
ID	Net Octets Rx	Net Packets Rx	Net Octets Tx	Net Packets Tx	Serial Octets Rx	Serial Packets Rx	Serial Octets Tx	Serial Packets Tx	Net Connect Up/Down times	Serial Overload Drop Packets
1	0	0	0	0	0	0	0	0	0	0



2. In this page, you can see the working status of the serial server. Table 2-3 describes the items of port statistics.

Table 2-	3 Items	of Serial	Server

Item	Description
ID	Serial port ID number of the serial port server
Net Octets Rx	The number of bytes received by the network
Net Packets Rx	The number of packets received by the network
Net Octets Tx	The number of bytes sent by the network
Net Packets Tx	The number of packets sent by the network
Serial Octets Rx	The number of bytes received by the serial port
Serial Packets Rx	The number of packets received by the serial port
Serial Octets Tx	The number of bytes sent by the serial port
Serial Packets Tx	The number of packets sent by the serial port
Net Connect Up/Down times	Number of network connections
Serial Overload Drop Packets	Number of packets discarded by serial port overflow

3. Click the **Configuration** button to directly switch to the relevant configuration interface.

2.5 Security

The "Security" page is used to display the working status of device security-related protocols, with three parts: port security, IP Source Guard, and MAC authentication.

1. Select **Monitor** > **Security** in the navigation area to enter the security display page, as shown in Figure 2-5, Figure 2-6, and Figure 2-7.

Figure 2-5 Port Security state



Port Sec	urity				
Port State	•				
Auto Refre	sh 🔵				» Port Configuration
Name	Total MAC Number	Configure MAC Number	Violation Count	Last Violate MAC	Last Violate Stamp
			No Data		
MAC State	e				
Auto Refre	sh 🔵			:	MAC Configuration
Interface	VID	MAC Address	Туре	Age Time Left(s)	
			No Data		
Figure 2-6	IP Source Guard sto	ate			
IP Sourc	e Guard				
User State	2				
Auto Refre	ish 🔵			1	>>> <u>User Configuration</u>
Interface	Туре	Filter	IP Address	MAC Address	VID
			No Data		
Figure 2-7	MAC Auth state				
MAC Au	th				
Auto Refre	sh 🔵				» <u>Port Configuration</u>
VID	MAC State	MAC Address Agir	ng Name	Timestamp	Action

No Data



2. In this page, you can see the working status of the ERPS, Spanning tree, IP Source Guard, and MAC authentication, and the specific parameters can be described in the relevant sections of the protocol.

3. Click the corresponding **Configuration** button to directly switch to the relevant configuration interface.

2.6 PoE State

The "PoE State" page is used to display the current PoE working status of the device.

(1) Select **Monitor** > **PoE State** in the navigation bar to enter the PoE status page, as shown in Figure 2-8.

Figure 2-8 PoE State							Q	~ 🖂
Global State								
Power consumption(W): 45.2		Power	ed ports: 2					
Auto Refresh							» PoE Configu	uration
Name	State	Description	Reason	Power(W)	lcut(mA)	Class	Admin State	
gigabitEthernet0/1	Enable			15.4	286.4	4	Enable	
gigabitEthernet0/3	Enable			29.8	553.5	4	Enable	
							total of 2 1 20 / p	age 🗸

(2) On the current page, you can see the total power supply of the device, the number of power supply ports, and the power supply status of each port. Specific parameter descriptions are shown in Table 2-4.

Item	Description					
Global	Power Consumption (W)	current PoE external power supply of the device				
sidle	Powered ports	The current total number of powered up ports				
	Name	Indication panel port number				
	State	PoE current power supply status, disable: power supply off state enable: power supply on state				
Port	Description	PoE port description				
Port	Reason	The reason why the port cannot supply power, Short: load short Management: insufficient power				
	Power(W)	The power consumed by the current port				
	lcut(mA)	The working current of the current port				

Table 2-4 Items of PoE State



Class	Class level of the PD device connected to this port
Admin State	Display whether the PoE function of this port is enabled or disabled

3. Click the **PoE Configuration** button to directly switch to the PoE configuration interface.

2.7 LLDP State

The LLDP Status page is used to display the device LLDP working status.

1. Select **Monitor** > **LLDP State** in the navigation area to enter the LLDP status page, as shown in Figure 2-9.

2. You can see the working status of the LLDP protocol that has been enabled in the page, and the specific parameters are described in the relevant sections of the protocol.

3. Click the **LLDP Configuration** button to directly switch to the LLDP configuration interface.

Figure 2-9	PLLDP St	tate						
LLDP State								O V II
<u> 🛱 Clear</u>	Auto Ref	fresh 🔵					» <u>llC</u>	P Configuration
Name	Тх	Aged	Rx	Rx Errors	Discards	Discard Tlvs	Unknown Tlvs	Action
					No Data			

2.8 IGMP Snooping State

The "IGMP Snooping State" page is used to display the working status of the device IGMP Snooping protocol.

1. Select **Monitor** > **IGMP Snooping State** in the navigation area to enter the IGMP Snooping Status page, as shown in Figure 2-10.

2. You can see the working status of the IGMP Snooping protocol that has been enabled in the page, and the specific parameters can be described in the relevant sections of the protocol.

3. Click the **IGMP Snooping Configuration** button to directly switch to the IGMP Snooping configuration interface.

Figure 2-10 IGMP Snooping State

IGMP Snoo	ping State			0 × 1
Auto Refresh	\bigcirc		» <u>10</u>	MP Snooping Configuration
VID	Interface	Group Address	Source Address	Туре
		No Dat	ta	



2.9 DHCP Snooping State

The "DHCP Snooping State" page is used to display the working status of the DHCP Snooping protocol of the device.

1. Select **Monitor** > **DHCP Snooping State** in the navigation area to enter the DHCP Snooping state page, as shown in Figure 2-11.

2. You can see the working status of dhcp Snooping protocol that has been enabled in the page, and the specific parameters can be described in the relevant sections of the protocol.

3. Click the **DHCP Snooping Configuration** button to directly switch to the DHCP Snooping configuration interface.

Figure 2-11 DHCP Snooping State

DHCP Sno	poping State					∩ × ¤
🕮 Read	🗟 Write 🛛 📩 Clear Flash	<u> Clear Shown</u>	Auto Refresh	٩		
					» DHCP Snoop	<u>ping Configuration</u>
VLAN	Interface	MAC Address	IP Address	Lease Time(s)	Туре	Action
			No Data			

2.10 QinQ Information

The "QinQ Information" page is used to display the working status of the device QinQ information.

1. Select **Monitor** > **QinQ Information** in the navigation area to enter the QinQ status page, as shown in Figure 2-12.

2. You can see the working status of QinQ that has been turned on in the page, and the specific parameters can be described in the relevant sections of the protocol.

3. Click the **QinQ Configuration** button to quickly switch to the QinQ configuration interface.





2.11 LoopDetect State

The "LoopDetect State" page is used to display the working status of the loop.

1. Select **Monitor** > **LoopDetect State** in the navigation area to enter the LoopDetect status page, as shown in Figure 2-13.

2. You can see the working status of loop detection that has been turned on in the page, and the specific parameters can be described in the relevant sections of the protocol.

3. Click the **LoopDetect Configuration** button to quickly switch to the loopdetect configuration interface.



2.12 ARP Information

The "ARP Information" page is used to display the working status of the device ARP information.

1. Select **Monitor** > **ARP Information** in the navigation area to enter the ARP status page, as shown in Figure 2-14.

2. You can see the working status of ARP that has been turned on in the page, and the specific parameters can be described in the relevant sections of the protocol.

3. Click the **Static ARP** button to quickly switch to the static ARP configuration interface.

Figure 2-14 ARP Information

ARP Information	٩		の ~ 详 ≫ <u>Static ARP</u>
IP Address	MAC Address	Interface	Туре
192.168.56.2	00:0e:c6:58:f5:9e	tap0	Dynamic
			total of 1 20 / page \lor



3 Configuration

3.1 VLAN

3.1.1 Introduction

Ethernet is a network technology based on the Carrier Sense Multiple Access/Collision Detect (CSMA/CD) mechanism. As the medium is shared, collisions and excessive broadcasts are common on an Ethernet. To address the issue, virtual LAN (VLAN) was introduced. The idea is to break a LAN down into separate VLANs, that is, Layer 2 broadcast domains whereby frames are switched between ports assigned to the same VLAN. VLANs are isolated from each other at Layer 2. A VLAN is a bridging domain, and II broadcast traffic is contained within it, as shown in Figure 3-1.





A VLAN is logically divided on an organizational basis rather than on a physical basis. For example, all workstations and servers used by a particular workgroup can be connected to the same LAN, regardless of their physical locations. VLAN technology delivers the following benefits:

• Confining broadcast traffic within individual VLANs. This reduces bandwidth waste and improves network performance.

• Improving LAN security. By assigning user groups to different VLANs, you can isolate them at Layer 2. For hosts in different VLANs to communicate, routers or Layer 3 switches are required.

• Flexible virtual workgroup creation. As users from the same workgroup can be assigned to the same VLAN regardless of their physical locations, network construction and maintenance is much easier and more flexible.

You can create VLANs based on:

- Port
- MAC address
- Protocol



- IP subnet
- Policy
- Other criteria

Because the Web interface is available only for port-based VLANs, this chapter introduces only port-based VLANs.

3.1.1.1 VLAN Mode

Depending on the tag handling mode, the VLAN Mode of a port can be one of the following three:

• Access :

An access port belongs to only one VLAN and usually connects to a user device.

• Trunk :

A trunk port can join multiple VLANs to receive and send traffic for them. It usually connects to a network device.

• Hybrid :

A hybrid port can join multiple VLANs to receive and send traffic for them. It can connect either a user device or a network device.

A hybrid port is different from a trunk port in that:

- A hybrid port allows traffic of multiple VLANs to pass through untagged.
- A trunk port allows only traffic of the default VLAN to pass through untagged.

3.1.1.2 Port link type

By default, VLAN 1 is the default VLAN for all ports. However, you can change the default VLAN for a port as required. When doing that, follow these guidelines:

• Because an access port can join only one VLAN, its default VLAN is the VLAN to which it belongs and cannot be configured.

• Because a trunk or hybrid port can join multiple VLANs, you can configure a default VLAN for the port.

3.1.1.3 Frame handling methods

	pon coningoica wint a ac	TUUT VLAN HUHUCS U HUHIC (
Port type	Actions (in the	inbound direction)	Actions (in the outbound direction)		
1 011 19 00	Untagged frame	Tagged frame			
Access	Tag the frame with the default VLAN tag.	 Receive the frame if its VLAN ID is the same as the default VLAN ID Drop the frame if its VLAN ID is different from the default VLAN ID. 	Remove the default VLAN tag and send the frame.		

Table 3-1 A port configured with a default VLAN handles a frame as follows:



Trunk	Check whether the default VLAN is carried on the port: If yes, tag the	 Receive the frame if its VLAN is carried on the port. 	 Remove the tag and send the frame if the frame Carries the default VLAN tag. Send the frame without removing the tag if its VLAN is carried on the port but is different from the default one.
Hybrid	frame with the default VLAN tag. If not, drop the frame.	• Drop the frame if its VLAN is not carried on the port.	Send the frame if its VLAN is carried on the port. The frame is sent with the VLAN tag removed or intact depending on your configuration.

3.1.2 Configuring VLAN

3.1.2.1 Creating VLAN

1. Select **Configuration** > **VLAN** in the navigation area. The system automatically enters the VLAN page as shown in Figure 3-2. Table 3-2 describes the configuration items of creating a VLAN.

Figure 3-2 VLAN configuration page

۷	LAN	Conf	iguratio	n		
	+ <u>Add</u>	>	(<u>Delete</u>			
		ID	Name	Туре	Member	Action
		1	default	Static	gigabitEthernet0/1, gigabitEthernet0/2, gigabitEthernet0/3, gigabitEthernet0/4, gigabitEthernet0/5, gigabitEthernet0/6, gigabitEthernet0/7, gigabitEthernet0/8, gigabitEthernet0/9, gigabitEthernet0/10	<u>Edit</u>

Table 3-2 Vlan confi	iguration items
Item	Description
ID	This field displays the ID of the VLAN
name	By default, the description string of a VLAN is its VLAN ID, such as VLAN 0002.
Members	Indicates that the port sends the traffic of the VLAN without removing the VLAN tag.
Edit	Click to enter the VLAN editing page
Add	Click to enter the VLAN adding page
Delete	Select the VLAN ID, click to delete

2. Click **Add** button to enter the page for creating a VLAN, as shown in Figure 3-3.

3. Type VLAN number into the **ID** box, select the **Tagged Members** in the port panel to be assigned to these VLAN.

Figure 3-3 Create VLAN



Configuration		X X
	* ID:	
Selected 1 AG Port		Copper D Fiber
	8 6 4 2	
	습습습습	
10 9	/ 5 5 1	
		All Revert Deselect

4. Click the **Save** in the auxiliary area to save the configuration.

3.1.2.2 Configuring Trunk Port

1. Select **Configuration** > **VLAN** in the navigation area to enter the VLAN page as shown in Figure

3-4. Table 3-3 describes the configuration items of configuring a Trunk Port.

Figure 3-4 Trunk	Configuration page		
Trunk Configurati	on		
<u> </u>			
Name	Native VLAN	Allow VLANs	Action
		No Data	

2. Click **Batch Edit** button below "Trunk Configuration" to enter the trunk configuration page, as shown in Figure 3-5. Table 3-3 describes the configuration items of configuring a VLAN.

Item		Description	
Mode	Access	Sets the port's VLAN Mode to access	
	Trunk	Sets the port's VLAN Mode to trunk	
PVID		Set the port's default VLAN ID, only exist in access mode.	
		•The trunk ports at the two ends of a link must have the same PVID. Otherwise, the link cannot properly transmit packets	
Native Vlan		VLAN (Native Vlan) , only exist in Trunk mode.	
Allow VLANs		Select the VLANs that are allowed through the port.	

Table3-3 The description of the Trunk configuration

Figure 3-5 Interface configuration page



Configuration	ж ×
* Mode:	Access Trunk
* PVID/Native VLAN:	1
* Allow VLANs:	all
Selected 1 AG Port	Copper 🛄 Fiber
	All Revert Deselect

3. Select the VIan Mode, type VLAN number in PVID and Allow VLANs box, click **Ok** button to complete the configuration.

4. Click the **Save** in the auxiliary area to save the configuration.

3.2 Port

3.2.1 Port Configuration

You can use the interface management feature to view interface information, create/remove logical interfaces, change interface status, and reset interface parameters, as shown in Figure 3-6.

Figure 3-6 Port Configuration page

L2 Port										
<u> </u>									» <u>Port</u>	Statistics
Name	Admin State	Port Mode	PVID/Native VLAN	Allow VLANs	Speed	Duplex/Auto-Neg	Flow Control	MTU	Description	Action
gigabitEthernet0/1	No shutdown	Access	1		AUTO	AUTO	OFF	1500		<u>Edit</u>
gigabitEthernet0/2	No shutdown	Access	1		AUTO	AUTO	OFF	1500		<u>Edit</u>
gigabitEthernet0/3	No shutdown	Access	1		AUTO	AUTO	OFF	1500		<u>Edit</u>
gigabitEthernet0/4	No shutdown	Access	1		AUTO	AUTO	OFF	1500		<u>Edit</u>

Configuring interface management

1. Select **Configuration** > **Port** > **Port Configuration** in the navigation area to enter the port configuration page as shown in Figure 3-6.

2. Select the ports to be configured, click **Edit** button to enter the page for configuring an interface, as shown in Figure 3-7. Table 3-4 describes the configuration items of configuring an interface.

Figure 3-7 Port Configuration page



Port Configuration						x x
* Admin State :	No Change	Shutdo	wn No	shutdown		
Description :						
* Port Mode:	No Change	Access	Trunk			
* PVID/Native VLAN :	1					
	≈,	Advanced	Setting			
* Media Type:	No Change	RJ45				
* Speed:	No Change	AUTO	10M	100M	1000M	
* Duplex:	No Change	AUTO	FULL	HALF		
* Flow Control :	No Change	ON	OFF			
* MTU:	1500					

Table 3-4 Configuration items of Port

Item	Description			
Admin State	Shutdown/no shutdown the port.			
Description	Set the description of a logical interface.			
Port Mode	Set the port's vlan mode, Access or Trunk			
PVID/Native VLAN	Set the port's PVID or Native VLAN.			
	Set the medium type of the Combo ports			
	RJ45: the mode of port is 10/100/1000BASE-T			
Mealum type	• SFP: the mode of port is 1000BASE-X			
	Note: only for combo ports.			
	Set the port's transmission rate:			
	10: indicates 10 Mbps			
(paged (copper)	100M: indicates 100 Mbps			
speed(copper)	1000M: indicates 1000 Mbps			
	Auto: indicates auto-negotiation			
	Note: only for copper ports.			
	Set the port's duplex mode:			
	AUTO: indicates auto-negotiation			
Duplex(copper)	FULL: indicates full duplex			
	HALF: indicates half duplex			
	Note: only for copper ports.			



	Set the port's mode
(pood/fibor)	• 100BASE-FX: indicates the port mode is 100BASE-FX.
	• 1000BASE-X: indicates the port mode is 1000BASE-X.
speed(libel)	• 2500BASE-X: indicates the port mode is 2.5G BASE-X.
	• 10G BASE-X: indicates the port mode is 10G BASE-X.
	Note: only for fiber ports.
	Enables or disables port's autoneg.
	The auto-negotiation function needs to be enabled or disabled at the same
Autoneg(liber)	time as the peer end, otherwise a link failure will occur.
	Note: only for fiber ports.
Flow control	Enables or disables port's Flow control.
νατι	Allows or forbids jumbo frames to pass through the port. Default length of packets is
MIO	46-1500 bytes.
Admin Shutdown	Shutdown/no shutdown the port.

3.2.2 Port Extension

3.2.2.1 Rate Limiting

Port-based rate limiting allows you to limit the speed at which network traffic is sent or received by a device that is connected to a port on your switch. Unlike 802.1p Quality of Service (QoS), port-based rate limiting does not prioritize information based on type. Rate limiting simply means that the switch will slow down traffic on a port to keep it from exceeding the limit that you set. If you set the rate limit on a port too low, you might see degraded video stream quality, sluggish response times during online activity, and other problems.

The best use of rate limiting is to keep low-priority devices that are connected to your switch from using too much of your bandwidth and slowing down your other connected devices. A combination of rate limiting and QoS can help you maximize your network's efficiency and prioritize devices and activities.

Configuring Port Ratelimit

1. Select **Configuration** > **Port** > **Port Extension** > **Rate Limiting** in the navigation area to enter the port ratelimit page as shown in Figure 3-8.

2. Click the **Batch Edit** button below "Rate Limiting" to enter the configure rate limiting page, as shown in Figure 3-9, type the number in the box. Table 3-5 describes the configuration items of configuring an interface.

3. Click the **Ok** button.

4. Click the **Save** button in the auxiliary area.

Figure 3-8 Port Ratelimit page



Rate Lin	niting				
<u> ØBatch Ec</u>	dit				
Name	In CIR(kbps)	In CBS(kB)	Out CIR(kbps)	Out CBS(kB)	Action
			No Data		
Fiaure 3-9	Port Ratelimit conf	iauration			
Configu	re Rate Limiting	geranen			× ×
	Input:		Output:		
* In	CIR(kbps): 0	<u>^</u> v	* Out CIR(kbps):	0	
*	n CBS(kB): 0		* Out CBS(kB):	0	
Select	ted 1 AG Port				Copper 🔲 Fiber
	10 9				
				All	Revert Deselect



• CBS embodies a rate-limit feature for policing traffic. When policing traffic with CBS, here recommends the burst value 4 times of the limit value. If the burst values are too low, then the achieved rate is often much lower than the configured rate.

Table 3-5 Port Ratelimit Configuration items				
Item	Description			
In CIR (kbps)	Specify the rate limit in the inbound direction (KBits).			
In CBS (KB)	Specify the burst size in the inbound direction (KBits).			
Out CIR (kbps)	Specify the rate limit in the outbound direction (KBits).			
Out CBS (KB)	Specify the burst size in the outbound direction (KBits).			

3.2.2.2 Storm Control

A traffic storm occurs when a large amount of broadcast, multicast, or unicast packets congest a network.

You can use the storm suppression function to limit the size of a particular type of traffic (currently broadcast, multicast and unknown unicast traffic) on a per-interface basis in Ethernet port view or port group view.



In interface or port group view, you set the maximum broadcast, multicast or unknown unicast traffic allowed to pass through an interface or each interface in a port group. When the broadcast, multicast, or unknown unicast traffic on the interface exceeds the threshold, the system discards packets until the traffic drops below the threshold.

Configuring the Storm Control

1. Select **Configuration** > **Port** > **Port Extension** > **Strom Control** in the navigation area to enter the storm control page as shown in Figure 3-10.

ntrol page		
Туре	Percentage(%)	Action
	ntrol page Type	Type Percentage(%)

No Data

2. Select the Type, type the box of the Percentage, select the ports to be configured in the port panel, as shown in Figure 3-11. Table 3-7 describes the configuration items of configuring Strom control.

XX

- 3. Click the **Ok** button to complete the configuration.
- 4. Click the **Save** in the auxiliary area.

Figure 3-11 Strom Control configuration	
Configure Storm Control	

* Type:	Disabled	Broadcast	Multicast	Unicast	Multicast+Bro	adcast
	Unicast+Br	oadcast Al				
* Percentage(%):						
Selected 1 AG Port					Copp	er 🗌 Fibe
8	6 4	2				
	COC	\Box				
10 9 7	7 7 7 7 7 7 7 7 7 7	1				
					All Revert	Deselect

Table 3-7 Items of the storm control

Item		Description
	Disabled	Disable storm control
Туре	Broadcast	Selects the parameter used in broadcast suppression and sets its
		value in the percentage box.



Multicast		Selects the parameter used in multicast suppression and sets its
	Monicasi	value in the percentage box.
	Unicast	Selects the parameter used in unicast suppression and sets its
	Unicasi	value in the percentage box.
multicast-broc		Selects the parameter used in multicast and broadcast
	momeasi-bioddeasi	suppression and sets its value in the percentage box.
	unicast-broadcast	Selects the parameter used in unicast and broadcast,
	officasi-broadcasi	suppression and sets its value in the percentage box.
		Selects the parameter used in unicast and unicast,
		broadcast, suppression and sets its value in the percentage box.
Percentage (%)		Indicates the maximum percentage of traffic to the total
		transmission capability of an Ethernet interface.

3.2.2.1 Isolation

Usually, Layer 2 traffic isolation is achieved by assigning ports to different VLANs. To save VLAN resources, port isolation is introduced to isolate ports within a VLAN, allowing for great flexibility and security.

1. Switch support multiple isolation groups which can be configured manually. These devices are referred to as multiple-isolation-group devices.

2. There is no restriction on the number of ports assigned to an isolation group.

3. Within the same VLAN, Layer 2 data transmission between ports within and outside the isolation group is supported.

Configuring an Isolation Group

1. Select **Configuration** > **Port** > **Port Extension** > **Isolation** in the navigation area to enter the Port isolate page as shown in Figure 3-12.

2. Select the port to be isolated, click **Ok** button.

3. Click **Save** in the auxiliary area.

Figure 3-12 Port Isolate page

Configure Isolation		X X
	Action:	
Selected 1 AG Port		Copper 🛄 Fiber
10 9		
		All Revert Deselect

3.2.3 Port Mirroring



Port mirroring is to copy the packets passing through one or multiple ports (called source interface) to a port (called the destination interface) on the local device. The source interface is connected with a monitoring device. By analyzing on the monitoring device, the packets mirrored to the destination interface, you can monitor the network and troubleshoot possible network problems.





Creating a mirroring group

1. Select **Configuration > Port > Port Mirror** in the navigation area to enter the Port mirror page as shown in Figure 3-14.

Figure	3-14	Port	Mirror	Page
iguic	0 14	1 011	1411101	i uge

Port Mirroring					
ID	Destination Interface	Source Interfaces	Action		
1		٥	Edit Delete		
2		٥	Edit Delete		
3		0	Edit Delete		

2. Click the Edit button for the corresponding ID and select the destination interface or source interface, as shown in Figure 3-15. Table 3-8 describes the configuration items of creating a mirroring group.

ltem	Description
Session	ID of the mirroring group to be created
Destination Interface	the monitor port for the mirroring group, there can only be one
Source Interface	mirroring ports for the mirroring group, there can be more than one

Table 3-8 Configuration items of creating a mirroring group

Figure 3-15 The page for creating a mirroring group



Port Mirrori	ng		0 × 1
ID	Destination Interface	Source Interfaces	Action
1	gigabitEthernet0/1 V	gigabitEthernet0/3 × gigabitEthernet0/2 × gigabitEthernet0/4 ×	Save Cancel
2		gigabitEthernet0/2 🗸 gigabitEthernet0/3 🗸	Edit Delete
3		gigabitEthernet0/4 🗸 gigabitEthernet0/5	Edit Delete

3. Click the **Save** button for the corresponding ID.

- 4. Click Ok button.
- 5. Click **Save** in the auxiliary area.

3.2.4 Port Aggregation

3.2.4.1 Overview

Link Aggregation

Ethernet link aggregation, most often simply called link aggregation, aggregates multiple physical Ethernet links into one logical link to increase link bandwidth beyond the limits of any one single link. This logical link is called an aggregate link. It allows for link redundancy because the member physical links dynamically back up one another.

As shown in Figure 3-16, Switch A and Switch B are connected with three physical Ethernet links. These physical Ethernet links are aggregated into an aggregate link, Link aggregation 1. The bandwidth of this aggregate link can be as high as the total bandwidth of these three physical Ethernet links.

Figure 3-16 Port Isolate page



System Priority:4096

LACP

The IEEE 802.3ad Link Aggregation Control Protocol (LACP) enables dynamic aggregation of physical links. It uses link aggregation control protocol data units (LACPDUs) for exchanging aggregation information between LACP-enabled devices.

There are two link aggregation modes: dynamic and static. Dynamic link aggregation uses LACP while static link aggregation does not. A link aggregation group operating in static mode



is called a static link aggregation group, while a link aggregation group operating in dynamic mode is called a dynamic link aggregation group.

3.2.4.2 Configuring an Aggregation Group

Configuration procedure:

1. Select **Configuration > Port > Port Aggregation** in the navigation area to enter the Link Aggregation page as shown in Figure 3-17, The description of the link aggregation is described in Table 3-9.

Figure 3-17 Global Configure Page

Global Configuration							
* Load balancing method:	Source MAC	Source IP	Source Port	Destina	tion MAC	Destination IP	Destination Port
	Source&Destination MAC		Source&Destin	ation IP	Source&E	estination Port	

Table 3-9 description of global configure item

Item	Description		
	dst-mac	Equalize according to the destination MAC address	
	src-mac	Equalize according to the source MAC address	
	src-dst-mac	Equalize according to the destination MAC address and source MAC	
		address	
Load balancing	dst-ip	Equalize according to the destination IP address	
method	srt-ip	Equalize according to the source IP address	
momod	src-dst-ip	Equalize according to the destination IP address and source IP address	
	dst-port	Equalize according to the L4 TCP/UDP destination port number	
	src-port	Equalize according to the L4 TCP/UDP source port number	
	src-dst-port	Equalize according to the L4 TCP/UDP destination port number and	
		source port number	

2. In the Aggregate ports Configure page, click **+Add** button to enter port configuration page, as shown in Figure 3-18, The description of the link aggregation is described in Table 3-10.

Item		Description	
	ID	The ID of the	Aggregation Member
		Manual	Manual mode
		Active	In this mode, the ports send LACP packets at regular
port	ion Type	ACIVE	intervals to the partner ports
configuration		Type Passive	In this mode, the ports do not send LACP packets until the
			partner port sends LACP packets.
	T GSSIVE		After receiving the LACP packets from the partner port, the
		ports send LACP packets to the partner port.	

Table 3-10 description of Aggregation Member

Figure 3-18 Aggregation port configuration page



Port Configuration		x x
	* Type: Manual Active Passive	
	* ID: 1	~
Selected 1 AG Po	rt	Copper D Fiber
10 9		
		All Revert Deselect

Select the type of aggregation, text the "ID" box, select the port in the port panel, click **Ok** button to complete the configuration.

After the configuration is completed, the aggregation port created is displayed on the Aggregation Port page, as shown in Figure 3-19. The description of Aggregation Port is described in Table 3-11.

Figure 3-19 Aggregation port page

Aggreg	Aggregate Ports						
+ <u>Add</u>							
ID	Name	Туре	Member	Action			
1	po1	Manual	gigabitEthernet0/3, gigabitEthernet0/4	<u>Edit</u> <u>Delete</u>			

Table 3-11 description of Aggregation port

Item		Description
	ID	The ID of the Aggregation Port
Aggregation	Name	The name of the Aggregation Port
Port	Туре	The mode of the Aggregation Port
	Member	The member ports of the Aggregation Port

3.2.5 Port Violation

During the use of the device, active or passive violations may occur on the switch port, such as port security violations, port flapping violations, port loop detection violations, etc. The port violation module is used to configure the recovery enablement and recovery time of the violating port, and displays the port's violation behavior.

Configuration procedure:



Select **Configuration** > **Port** > **Port Violation** in the navigation bar to enter the port violation global configuration interface, check the service that needs to be violated, turn on the automatic recovery button and configure the recovery time, click the **Apply** button to complete the configuration, such as Figure 3-40 is shown, and the global configuration parameters are shown in Table 3-13.

Figure 3-19 Global configuration page		
Global Configuration		
Note: The auto recovery function should be turned on first, and the default timeout interval is 300 second	s. Check the service that <u>y</u>	you want to use auto recovery
Service: BPDU Guard	Port Up/Down	Port Security V Loop Detect
	Timeout Interval(s):	200
Add recovery. On	micout interval(3).	
	🗸 🗸 🗸	📩 Reset
Auto recovery: ON	Timeout Interval(s):	300 曲 Reset

Table 3-11 Description of Global configuration

Items		Description
Service	BPDU Guard	Violations caused by port BPDU protection
	Port Up/Down	Violations caused by frequent port Up/Down
	Port Security Violations caused by illegal port security	
	Loop Detect	Violations caused by a loop in the device downstream of the port
Auto recovery		Enable/disable automatic recovery of violating ports
Timeout interval		Configure the recovery time of the violating port, in seconds

When you need to manually restore the violating port, select the port that needs to be restored and click the **Reset** button to restore the port function.

Figure 3-20 Port State		
Port State		
Note: Click the recovery button to recover the port		
Name	Reason	Action
gigabitEthernet0/2	Loop Detect	Recover

3.3 Spanning Tree

3.3.1 Overview

Spanning Tree Protocol (STP) is a Layer-2 management protocol. It cannot only selectively block redundant links to eliminate Layer-2 loops but also can back up links.

Like many protocols, STP is continuously updated from Rapid Spanning Tree Protocol (RSTP) to Multiple Spanning Tree Protocol (MSTP) as the network develops.

For the Layer-2 Ethernet, only one active link can exist between two local area networks (LANs). Otherwise, a broadcast storm will occur. To enhance the reliability of a LAN, it is necessary to establish a redundant link and keep some paths in backup state. If the network is faulty and a



link fails, you must switch the redundant link to the active state. STP can automatically activate the redundant link without any manual operations. STP enables devices on a LAN to:

- Discover and start the best tree topology on the LAN.
- Troubleshoot a fault and automatically update the network topology so that the possible best tree topology is always selected.

The LAN topology is automatically calculated based on a set of bridge parameters configured by the administrator. The best topology tree can be obtained by properly configuring these parameters.

RSTP is completely compatible with 802.1D STP. Like traditional STP, RSTP provides loop-free and redundancy services. It is characterized by rapid speed. If all bridges in a LAN support RSTP and are properly configured by the administrator, it takes less than 1 second (about 50 seconds if traditional STP is used) to re-generate a topology tree after the network topology changes.

STP and RSTP have the following defects:

• STP migration is slow. Even on point-to-point links or edge ports, it still takes two times of the forward delay for ports to switch to the forwarding state.

• RSTP can rapidly converge but has the same defect with STP: Since all VLANs in a LAN share the same spanning tree, packets of all VLANs are forwarded along this spanning tree. Therefore, redundant links cannot be blocked according to specific VLANs and data traffic cannot be balanced among VLANs.

- MSTP, defined by the IEEE in 802.1s, resolves defects of STP and RSTP. It cannot only rapidly converge but also can enable traffic of different VLANs to be forwarded along respective paths, thereby providing a better load balancing mechanism for redundant links.
- In general, STP/RSTP works based on ports while MSTP works based on instances. An instance is a set of multiple VLANs. Binding multiple VLANs to one instance can reduce the communication overhead and resource utilization.

3.3.2 Spanning Tree Configuring

Global Configuration of the Spanning Tree

Select **Configuration** > **Spanning Tree** > **Global Configuration** in the navigation area to enter the Global Configuration page, as shown in Figure 3-20. Table 3-12 describes the Spanning Tree Global Configuration items.

Figure 3-20 Spanning Tree Global Configuration



Spanning Tree				
Global Configura	ation			
Mode:	RSTP V	State:		➢ Advanced Setting
Helle Time(s)	2	Priority	21769	
field fine(s).	2	Phoney.	52/00	Lifer Disable filmedut.
Forward Delay(s):	15	Transmit Hold Count:	6	Error Disable Timeout Int 300
Max Age(s):	20			
			イ Apply	

Table 3-12 Spanning Tree Global Configuration items

Item		Description		
Global Configura tion	Mode	Set the working mode of STP, including STP, RSTP, and MSTP.		
		STP: In STP mode, each port of the device sends STP BPDUs.		
		RSTP: In RSTP mode, each port of the device will send out RSTP BPDUs.		
		When it is connected to the device running STP, the port will		
		automatically migrate to STP mode.		
		MSTP: In MSTP mode, each port of the device sends MSTP BPDUs. When		
		it is connected to the device running STP, the port is automatically		
		migrated to work in STP mode.		
	State	Enable STP.		
	Hello Time	Hello timer interval		
	Priority	Bridge priority		
	Forward Delay	Set the delay time before an interface change to forwarding		
	Transmit Hold Count	Maximum number of BPDUs sent by the bridge per second		
	Max Age	Set the maximum duration that messages are saved in the device		
	Error Disable Timeout	Configuration error port auto disable function		
	Error Disable Timeout Interval	Configuration error port is automatically disabled timeout.		

Configuring the Instance

Select **Configuration** > **Spanning Tree** > **Instance Configuration** in the navigation area to enter the instance configuration page, as shown in Figure 3-21. Table 3-13 describes the Instance Configuration items.

Figure 3-21	Spanning Tree Instance Con	figuration		
Instance Co	nfiguration			
+ <u>Add</u>			» Spanning Tree	<u>State</u>
ID	VLAN List	Priority	Action	
		No Data		

Table 3-13 Spanning Tree Instance items


Item		Description
	ID	Instance ID
Instance	VLAN List	Instance associated VLAN list
Configuration	Priority	Bridge priority in this instance
	Action	Click to delete this entry

Configuring the Ports

Select **Configuration** > **Spanning Tree** > **Port Configuration** in the navigation area to enter the port configuration page, as shown in Figure 3-22. Table 3-14 describes the port Configuration items.

Figure 3-22 Spanning Tree port Configuration **Port Configuration**

<u> ⊿Batch Edit</u>										» <u>Spa</u>	nning Tree State
Name	State	Path Cost	Link Type	Root Guard	Auto Edge	Edge Port	Port Fast	BPDU Guard	BPDU Filter	Instance/Priority/TCN Restrict	Action
gigabitEthernet0/1	Enable	20000000	P2P	Disable	Disable	Disable	Disable	Default	Default	0 128 Disable	<u>Edit</u>
gigabitEthernet0/2	Enable	20000000	P2P	Disable	Disable	Disable	Disable	Default	Default	0 128 Disable	<u>Edit</u>

Table 3-14 Spanning Tree port Configuration items

Item		Description			
	Name	Interface name			
	State	STP status			
	Path Cost	Configure interface path cost			
	Link Type	Configure interface link type			
	Root Guard	Configure the interface to enable root protection.			
Port	Auto Edge	Configure the interface to automatically recognize the function			
Configuration	7,610 2090	of the edge port.			
e en liger aller i	Edge Port	Configure the interface as an edge port.			
	Port Fast	Configure the interface as a fast port.			
	BPDU Filter	Configure the interface to enable BPDU filtering.			
	BPDU Guard	Configure the interface to enable BPDU protection.			
	Instance/Priority/TCN	Configure the instance Priority and ICN restrict			
	restrict	configure me instance, monty, and rentresiner.			

3.4 ERPS

3.4.1 Overview

The ITU-T G.8032 ERPS feature implements protection switching mechanisms for Ethernet layer ring topologies. This feature uses the G.8032 Ethernet Ring Protection (ERP) protocol, defined in ITU-T G.8032, to provide protection for Ethernet traffic in a ring topology, while ensuring that no



loops are within the ring at the Ethernet layer. The loops are prevented by blocking traffic on either a predetermined link or a failed link.



Initial State

As the following figure, the devices on the ring have been configured, and all the link status is up.

The RPL owner interface will be blocked by ERPS protocol to prevent loops. If a RPL neighbor interface is configured, it will also be blocked. Other interfaces are under the forwarding state, can forward the traffic.

Link failure

When there is a link failure between SwitchD and SwitchE, the two interfaces on the link will be blocked by ERPS protocol, the RPL owner interface will be forwarded.





Figure 1 Link failure

Link restores

When the failure link is restored. When the erps ring is configured to revertive mode, the RPL owner interface will be blocked by ERPS protocol, the restored link will be configured to forwarding state to forward traffic.





Single-Ring:

Only one ring in a network topology needs to be protected.

In Figure 3-23, the network topology has only one ring, only one ring protection link (RPL) owner node, and only one RPL. All nodes must belong to the same ring automatic protection switching (R-APS) virtual local area network (VLAN).

- All devices in the ring network must support ERPS.
- The links between devices in the ring network must be directly connected, and there must be no intermediate devices.

Figure 3-23 ERPS single ring





Tangent Rings:

The two rings in a network topology that share one device need to be protected.

In Figure 3-24, the two rings in the network topology share one device. Each ring has only one PRL owner node and only one RPL. The two rings belong to different R-APS VLANs.

- All devices in the ring network need to support ERPS.
- The links between devices in the ring network must be directly connected, and there must be no intermediate devices.



Figure 3-24 ERPS Tangent Rings

Intersecting Rings:

Two or more rings in a network topology share one link. (Each link between intersecting nodes must be a direct link without any intermediate node.)

In Figure 3-25, four rings exist in the network topology. Each ring has only one PRL owner node and only one RPL. The four rings belong to different R-APS VLANs.

- All devices in the ring network need to support ERPS.
- The links between devices in the ring network must be directly connected, and there must be no intermediate devices.



Figure 3-25 ERPS Intersecting Rings



3.4.2 Configure the ERPS

Ring Configuration

Select **Configuration** > **ERPS** > **Ring Configuration** in the navigation area to enter the ERPS Ring Configuration page as shown in Figure 3-26, The description of the ERPS Ring Configuration is described in Table 3-15.

Figure 3-26 ERPS Ring Configuration

Ring Config	guration		
+ <u>Add</u>			» ERPS State
ID	East Interface	West Interface	Action



Table 3-15 Ring Configuration description

Item	Description
Ring ID	Can be any number. The ring number of each ERPS ring must be unique.
East Interface	The east interface of the ERPS ring
West Interface	The west interface of the ERPS ring
Action	Delete ERPS Ring

ERPS instance configuration

Select **Configuration > ERPS > Instance Configuration** to enter the ERPS instance configuration page, as shown in Figure 3-27.

Figure 3-27 ERPS Instance Configuration

Instance	Config	uration						
+ <u>Add</u>								» ERPS State
Name	ID	Ring ID	Level	RAPS VLAN	Owner Interface	Sub-ring Blocked Interface	Attached Instance	Action
					No Data			

Click **+Add** button below "Instance Configuration" to create an erps instance, as shown in Figure 3-28. The description of the ERPS Instance Configuration summary is described in Table 3-16.

Item	Description
Ring Configuration	Create a new one or Link to a ERPS ring which has been created
Ring ID	The associated ring ID must be the ring that has been created.
East Interface	The east interface of the ERPS ring
West Interface	The west interface of the ERPS ring

Table 3-16 Description of the ERPS Instance Configuration



	Each switch in the same ring must be configured with the same RAPS management
	VLAN for transmitting ERPS protocol packets.
RAPS VLAN	The RAPS management VLAN can be a virtual VLAN and needs to be distinguished
	from the data VLAN.
	* It does not need to be created in 6&8 series switch, as it is created by default.
	ERPS Owner interface can select either the east interface or the west
Owner interface	interface as the Owner node.
	Each ERPS ring has one and only one interface configured as an RPL owner interface
	that controls the ports that need to be blocked.
	The subring 's blocked interface, one subring has only one blocking port. You can
Sub ring Plack	choose east or west.
SUD-III Y DIOCK	This parameter needs to be configured only for the tangent ring. The sub-rings of the
intendce	two devices with tangent to the ring must be configured with the sub-ring
	blocking port.
Attached	It only needs to be set when the sub-ring blocking port needs to be configured, and
Instance	is set to the ring ID that is tangent to the current sub-ring.

Figure 3-28 ERPS Instance Configuration ERPS Configuration

* Ring Configuration :	Create Link
* Ring ID:	1 ~
* East Interface:	gigabitEthernet0/9 \lor
* West Interface:	gigabitEthernet0/10 V
* RAPS VLAN :	1000
	➢ Advanced Setting
	-
Name:	
* ID:	0
* evel :	0
* Owner Interface:	None East West
* Sub-ring Blocked Interface:	None East West

× ×

View ERPS state

Click ERPS State button to enter the ERPS State page, as shown in Figure 3-29. The description of the ERPS State summary is described in Table 3-17.



Figure 3-29	PERPS State					
Auto Refres	h 🔵					ERPS Configuration
Name	Ring ID	State	Last Event	East Interface	West Interface	Action



Table 3-17 ERPS state description

Item	Description
Name	The name of the ERPS ring
Ring ID	The number of the ERPS ring
	ERPS ring status, include:
	Idle:
Charles	Stable state when all non-RPL links are available. In this state, the owner node blocks the RPL port and periodically sends NR-RB packets. The neighbor node blocks the RPL port. All nodes enter the idle state after the owner node enters the idle state.
STOTE	Pending:
	Transient state between the previous states
	Protection:
	State when a non-RPL link is faulty. In this state, the RPL link is unblocked to forward traffic. All nodes enter the protection state after a node enters the protection state.
	Recent state event
	RAPS-NR: remote failure recovery
	RAPS-NR-RB: remote switchback
Last Event	RAPS-SF: remote fault
	LOCAL-SF: local fault
	LOCAL-CLEAR-SF: local failure recovery
	WTR-EXP: local switchback
East Interface	The east interface of the ERPS ring
West Interface	The west interface of the ERPS ring
Action	When the faulty link is restored, you can choose to manually revert immediately, otherwise the system will automatically revert after 5 minutes.

3.5 PoE Management

3.5.1 PoE Overview

Power over Ethernet (PoE) means that power sourcing equipment (PSE) supplies power to powered devices (PDs) from Ethernet interfaces through twisted pair cables.

3.5.2 PoE Configuration





- 1. Before configure PoE, make sure that the PoE power supply and PSE are operating normally; otherwise, you cannot configure PoE or the configured PoE function does not take effect.
- 2. For switches with external power supply, the input voltage range is 44-57 V. In order to obtain a more stable power supply, it is recommended that the power supply voltage of AT equipment be greater than 50V, and that of BT equipment be greater than 53V.

1. Select **Configuration** > **PoE** in the navigation area to enter the PoE Management page as shown in Figure 3-30, the Table 3-18 describes the items of PoE Global Configuration.

2. Type the "**Power supply**" and "**Power reserved**" boxes, and click **Apply** button.

Figure 3-30 PoE	Global Coi	nfiguration				
Global Configu	ration					
* Power supply(W):	123.2	Power mana	gement: energy-savin	Ig		
* Power reserved(%):	0	Disconnectin	g mode: DC			
Alarm state: (Power a	arm(%): None			
			✓ Apply	🛱 Reset		

Table 3-18 description of PoE Global Configuration

ltem	Description
Power supply (w)	 By default, the default power provided by the device is 15.4W*port number, for example, the maximum power provided by an 8-port device is 123.2W For devices with external power supply, please fill in this parameter according to the actual configured power supply For devices with built-in power supply, please refer to the description of PoE power in the product manual for this parameter
Power reserved (%)	 Reserved power set against power fluctuations For devices with external power supply, it is recommended to fill in the power consumption of the main board For devices with built-in power supply, this parameter can be set 0 by default
Power management	Display the mode of power management is energy-saving. In this mode, the power requested and allocated to the port is based on the actual port's (real time) power consumption.
Disconnect mode	Display the mode of disconnection is DC disconnect
Alarm state	Turn on/off the log alarm when the power is insufficient
Power alarm (%)	Alarm power limit setting, when the PoE power consumption exceeds this value, the



system will automatically output a log alarm

3. Click **Batch Edit** below "port configuration" to enter PoE port configuration page, Select the port to be configured, as shown in Figure 3-31.

Figure 3-31 PoE Interface Configuration

Port Configuration			× ×
* Admin State :	Disabled Enable Force_on	Description:	
Max power(W):		* Priority: Low Medium High	
* Mode:	None Flow Ping	Legacy mode:	
Selected AG Port			Copper D Fiber
10 9	$\begin{array}{cccccccccccccccccccccccccccccccccccc$		
L		All	Revert Deselect

4. Click the **OK** to complete the operation, and then the page will return to the PoE Interface Configuration page, as shown in Figure 3-32. the Table 3-19 describes the items of the PoE Interface Configuration.

Figure 3-32 PoE Interface Configuration

Port Configurat	tion									
<u> </u>										» PoE State
Name	Admin State	Description	Max power(W)	Priority	Mode	IP address	Interval	Times	Legacy mode	Action
gigabitEthernet0/1	Enable			Low	None		30	10	Disable	Edit
gigabitEthernet0/2	Force_on	111	30	Low	Flow		30	10	Disable	Edit
gigabitEthernet0/3	Enable			Low	None		30	10	Disable	Edit
gigabitEthernet0/4	Enable			Low	None		30	10	Disable	Edit

5. Click the **Save** in the navigation area to save the configuration.

ltem	Description				
Name	Indication panel port number				
Admin State	Enable/disable PoE for the PoE Interface.				
	Disabled: Disable the PoE power supply of the port				
	Enable: Enable the Po E power supply of the port				
	Force_on: Forcibly turn on the PoE power supply of the port. This function is implemented				
	by skipping the PD valid detection and PD classification detection, and directly supply				
	power to the PD load. In this mode, the default maximum load power is 15w, if you need				
	to power the device above 15w, the maximum power parameter needs to be configured				
	at the same time.				
Description	Description of PoE port				

Table 3-19 the items of the PoE Interface Configuration



	Configure the maximum power for this port.
Max Power (W)	For AF/AT ports, the maximum port power range is 1-30
	For BT ports, the port maximum power range is 1-90
	In default mode, the port will perform power management according to PD class.
	Configuring the port's priority
	Users can configure the interface power supply priority of the PoE switch. The priority from
	high to low is: high, medium, and low.
	When the overall power of the PoE switch is insufficient, the ports with lower priority will be
	powered off first.
Priority	The port priorities of the same priority are arranged in the order of the port number, and
	the priority of the port with the smaller port number is higher. For example, the priority of
	port $0/1$ is higher than ports $0/2$ and $0/3$.
	Newly inserted ports will not affect the power supply of PDs that are already powered
	which has the same priority.
	Newly inserted ports which have higher priority will preempt low- priority ports.
	None: Disable the PD alive detection function
	Flow: Enable the PD alvie detection function in Flow mode. This function is realized by
	monitoring the port counter, if the port packets counter does not change, it is judged that
	the PD device connected to the port is in abnormal state, and then turn off the power
	supply for a few seconds and then turn on.
Mode	Ping: Enable the PD alive detection function in Ping mode. This function is realized by
	continuously pinging the PD load, if a period of time the ping packet fails during the
	interval, it is judged that the PD device connected to the port is in abnormal state, and
	the power supply is turned off for a few seconds and then turned on again.
	It is recommended to use the switch diagnostics network tool -> ping to test whether the
	ping packet of the PD device can be used before enabling this function.
	Ping mode, the IP address of the PD load requires that the switch and the PD load be in
IP address	the same network segment.
Interval	The detection time interval
	The detection times
Times	PD start up time must be less than the interval * times, otherwise the PD load will always be
	in the power- off and start -up state.
	ON/OFF, the default is OFF.
	OFF: Only standard PD devices are supported, the detection resistance is between
Legacy mode	19k-26.5k, and the detection capacitance is less than 150nF.
	ON: Support non-standard PD devices, and can supply power to some PD devices whose
	detection resistance and capacitance values exceed the standard values.

3.6 Security

3.6.1 Port Security

3.6.1.1 Overview



The Port Security function restricts the number of valid MAC addresses on the port to limit the access of illegal users to the port. The illegal MAC packets will be directly discarded.

The legal MAC can be generated statically or dynamically. The static legal MAC is generated through user command line configuration; the dynamic legal MAC is dynamically generated through the MAC address learning function.

When the number of secure addresses on the port has reached the configured value of the maximum number of secure addresses, the new MAC access port will be recognized as an illegal MAC and a violation event will be generated. The user can configure the actions to be taken when the violation event occurs, respectively restrict or shutdown the port.

Restrict: Prohibit illegal MAC data from passing, and generate alarm log prompt information. Illegal MAC will prohibit access to the port within the MAC address aging time. It can be restored through shutdown and no shutdown ports.

Shutdown: The port is forced to be down, and the port recovery time can be configured. The port will automatically recover when the time is up; it can also be recovered by the shutdown, no shutdown command.

If you want to convert a dynamic security user to a static security user, you can enable the sticky function on the port. When the sticky function is enabled on the port, the dynamic users learned on the port will exist as static users. If the configuration is saved, the device will still exist after restarting the device.



NOTE:

- Only support L2 port configuration port security, such as ordinary physical port, aggregation port.
- Only support port security configuration in access mode.
- Does not support aggregation port member ports to configure port security functions.
- Does not support SPAN destination port configuration port security function.
- Does not support configuring port security functions on ports that have been configured with static MAC addresses.

3.6.1.2 Configuring Port Security

Port Configuration

Select **Configuration > Security > Port security** in the navigation area to enter the Port security page as shown in Figure 3-33.

Figure 3-33 Port Security statistic page



Port Co	nfigurat	ion					
<u> </u>	<u>Edit</u>						» Port State
Name	State	Max MAC Number	Sticky	Aging Time(min.)	Aging Static	Violation Mode	Action



Click the **Batch Edit** button below "Port Configuration" to enter the Port Configuration page, as shown in Figure 3-34. The items of the port configuration are described in Table 3-20.



Table 3-20 the items of the port security configuration

Item		Description
	State	Enable/disable port Security of the interface.
	Max MAC	Configure the maximum number of secure MAC addresses for the port, the
Port	Number	default maximum number of secure addresses is 1, the range is <1-1024>
	Sticky	Turn on/off the Sticky function.
Configuration	Aging Time(min)	Configure the security address aging time, in minutes. The default aging time
		is 0, which means that the aging function is turned off.
		Aging time range <0-1440>
		The default aging function only takes effect for dynamic and sticky security
		addresses.



Aging	Enable the static security address aging function
Static	Enable the static security address aging function.
	Configure port security violation handling, default violation
) (i - Lauti - Ja	mode is Restrict.
VIOIATION	Restrict: Prohibit illegal user data from passing, and log prompt
Mode	Shutdown: shutdown interface, and resume passing after errdisable recovery
	time.

MAC Configuration

Select **Configuration** > **Security** > **MAC Configuration** in the navigation area to enter the MAC Configuration page as shown in Figure 3-35.

Figure 3-35 MAC	configuration	summary
-----------------	---------------	---------

MAC Configuration					
+ <u>Add</u>					» MAC State
Interface	MAC Address		Туре	Action	
		No Data			

Click **+ADD** to enter the page of MAC Configuration page as shown in Figure 3-36. The items of the mac configuration are described in Table 3-21.

Figure 3-36 MAC configuration page

MAC Configuration

Interface :	gigabitEthernet0/1	/
* MAC Address :		
Type:	Static Sticky	

X X

Table 3-21 the items of the mac configuration

ltem		Description
	Interface	Select the interface to be configured.
MAC Configuration	MAC Address	Configure a static security address, the format of the security address: XXXX.XXXXXXXX The security address cannot be a broadcast or multicast Address.
	Туре	Configure the MAC address as dynamic or static.

3.6.2 IP Source Guard



3.6.2.1 Overview

IP Source Guard:

The Ip Source Guard binding function allows IP packets conforming to the IP+MAC binding to pass through the port, and non-conforming packets are directly discarded, thereby achieving the purpose of preventing IP/MAC spoofing attacks.

The binding entries of Ip Source Guard mainly come from two sources: user static configuration and dynamic acquisition in the ip dhcp snooping environment.

User static configuration: mainly for host users whose IP addresses are statically configured in the local area network.

Ip dhcp snooping dynamic acquisition: mainly respond to the host users who dynamically acquire the IP address through dhcp in the local area network.

IP/MAC spoofing attack: Illegal MAC users send IP packets with legal source IP to realize the legalization of access identity.

ARP Check:

The Arp-check (ARP packet check) function filters all ARP packets under the port and discards all illegal ARP packets, which can effectively prevent ARP spoofing in the network and improve the stability of the network.

In the device that supports the Arp-check function, the Arp-check function can generate corresponding ARP filtering information based on the legal user information (IP+MAC) generated by the security application modules such as IP Source Guard, so as to realize the illegal ARP packets filtering in the network.

3.6.2.2 Configuring IP Source Guard

1. Select **Configuration** > **Security** > **IP Source Guard** in the navigation area to enter the IP Source Guard Summary page as shown in Figure 3-37.

Figure 3-37 IP so	urce guard Summary		
Port Configura	tion		
<u> </u>			» Port State
Name	Verify Source	ARP Check	Action
		No Data	

2. Click **Batch Edit** button below "Port Configuration" in the current page, select the interface to be configured in the port panel, click **Verify Source** button, as shown in Figure 3-38.

Figure 3-38 IP source guard port configuration



Port Configuration	× ×
Verify Source:	
ARP Check:	
Selected 1 AG Port	Copper D Fiber
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	

Click **OK** button, the rules created were displayed in summary page as shown in Figure 3-39.

Figure 3-39 port configuration

Port Configuration			
<u> </u>			» Port State
Name	Verify Source	ARP Check	Action
gigabitEthernet0/1	Enable	Disable	Edit

3. Click +ADD button below "User Configuration" in current page, to enter the user configuration

page, Select the port in the interface box, text VID, IP Address, MAC Address, as shown in Figure 3-40.

Figure 3-40 IP source guard user configuration

User Configuration X					
Interface:	gigabitEthernet0/1		~		
VID:	1		\vee		
* IP Address:	192.168.56.20				
* MAC Address:	00-0E-C6-C1-37-89				

4. Click **OK** button, the rules created were displayed in summary page as shown in Figure 3-41.

Figure 3-41 IP source guard rules Summary						
User Configuration						
+ <u>Add</u>						» <u>User State</u>
Interface	VID	IP Address	MAC Address	Lease	Туре	Action
gigabitEthernet0/1	1	192.168.56.20	00-0E-C6-C1-37-89	Infinite	Static	<u>Delete</u>



3.6.2.3 Configuring ARP Check

1. Select **Configuration > Security > IP Source Guard** in the navigation area to enter the IP Source

Guard Summary page as shown in Figure 3-37.

2. Click Batch Edit button below "Port Configuration" in the current page, select the interface to

be configured in the port panel, click **ARP Check** button, as shown in Figure 3-42.

Figure 3-42 IP Sou Port Configuratio	urce Gua n	rd ARP Check			ж х
	Verify Sourc	e:			
	ARP Chec	k: 🚺			
Selected 1	AG Port			Copp	er 🗌 Fiber
10	9				
			All	Revert	Deselect

3. Click **+ADD** button below "User Configuration" in current page, to enter the user configuration page, as shown in Figure 3-43.

Figure 3-43 IP Source Guard User Configuration

User Configuration X						
Interface:	gigabitEthernet0/4		\sim			
VID:	1		\vee			
* IP Address:	192.168.56.20					
* MAC Address:	00-0E-C6-C1-37-89					

4. Click **APPLY** button, the rules created were displayed in summary page as shown in Figure 3-44.

Figure 3-44 ARP Check rules

User Configuration						
+ <u>Add</u>						» User State
Interface	VID	IP Address	MAC Address	Lease	Туре	Action
gigabitEthernet0/4	1	192.168.56.20	00-0E-C6-C1-37-89	Infinite	Static	<u>Delete</u>

3.6.3 Dot1X



3.6.3.1 Overview

The 802.1X(Dot1X) protocol was proposed by the IEEE 802 LAN/WAN committee for security of wireless LANs (WLAN). It has been widely used on Ethernet as a common port access control mechanism.

As a port-based access control protocol, 802.1X authenticates and controls accessing devices at the port level. A device connected to an 802.1X-enabled port of an access control device can access the resources on the LAN only after passing authentication.

Architecture of 802.1X

802.1X operates in the typical client/server model and defines three entities: Client, Device, and Server, as shown in below.





• Client is an entity seeking access to the LAN. It resides at one end of a LAN segment and is authenticated by Device at the other end of the LAN segment. Client is usually a user-end device such as a PC. 802.1X authentication is triggered when an 802.1X-capable client program is launched on Client. The client program must support Extensible Authentication Protocol over LAN (EAPOL).

• Device, residing at the other end of the LAN segment, authenticates connected clients. Device is usually an 802.1X-enabled network device and provides access ports (physical or logical) for clients to access the LAN.

• Server is the entity that provides authentication services to Device. Server, normally running RADIUS (Remote Authentication Dial-in User Service), serves to perform authentication, authorization, and accounting services for users.

Authentication modes of 802.1x

The 802.1X authentication system employs the Extensible Authentication Protocol (EAP) to exchange authentication information between the client, device, and authentication server. Client Device Server

• Between the client and the device, EAP protocol packets are encapsulated using EAPOL to be transferred on the LAN.

• Between the device and the RADIUS server, EAP protocol packets can be exchanged in two modes: EAP relay and EAP termination. In EAP relay mode, EAP packets are encapsulated in EAP over RADIUS (EAPOR) packets on the device, and then relayed by



device to the RADIUS server. In EAP termination mode, EAP packets are terminated at the device, converted to RADIUS packets either with the Password Authentication Protocol (PAP) or Challenge Handshake Authentication Protocol (CHAP) attribute, and then transferred to the RADIUS server.

Basic concepts of 802.1x

These basic concepts are involved in 802.1X: controlled port/uncontrolled port, authorized state, and control direction.

Controlled port and uncontrolled port

A device provides ports for clients to access the LAN. Each port can be regarded as a unity of two logical ports: a controlled port and an uncontrolled port. Any packets arriving at the port are visible to both logical ports.

• The uncontrolled port is always open in both the inbound and outbound directions to allow EAPOL protocol packets to pass, guaranteeing that the client can always send and receive authentication packets.

• The controlled port is open to allow data traffic to pass only when it is in the authorized state.



A controlled port can be in either authorized state or unauthorized state, which depends on the authentication result, as shown in Figure 3-45.

You can control the port authorization status of a port by setting port authorization mode to one of the following:

• Force-Authorized: Places the port in authorized state, allowing users of the port to access the network without authentication.

• Force-Unauthorized: Places the port in unauthorized state, denying any access requests from users of the port.



• Auto: Places the port in the unauthorized state initially to allow only EAPOL packets to pass, and turns the port into the authorized state to allow access to the network after the users pass authentication. This is the most common choice.

Control direction

In the unauthorized state, the controlled port can be set to deny traffic to and from the client or just the traffic from the client.

802.1X authentication triggering

802.1X authentication can be initiated by either a client or the device.

Unsolicited triggering of a client

A client can initiate authentication unsolicitedly by sending an EAPOL-Start packet to the device. The destination address of the packet is 01-80-C2-00-00-03, the multicast address specified by the IEEE 802.1X protocol.

Some devices in the network may not support multicast packets with the above destination address, and unable to receive authentication requests of clients as a result. To solve this problem, the device also supports EAPOL-Start packets using a broadcast MAC address as the destination address.

Unsolicited triggering of the device

The device can trigger authentication by sending EAP-Request/Identity packets to unauthenticated clients periodically (every 30 seconds by default). This method can be used to authenticate clients that cannot send EAPOL-Start packets unsolicitedly to trigger authentication, for example, a client running the 802.1X client application provided by Windows XP.

Authentication process of 802.1x

An 802.1X device communicates with a remote RADIUS server in two modes: EAP relay and EAP termination. The following describes the 802.1X authentication procedure in the two modes, which is triggered by the client in the examples.

EAP relay

EAP relay is defined in IEEE 802.1X. In this mode, EAP packets are carried in an upper layer protocol, such as RADIUS, so that they can go through complex networks and reach the authentication server. Generally, relaying EAP requires that the RADIUS server support the EAP attributes of EAP-Message and Message-Authenticator, which are used to encapsulate EAP packets and protect RADIUS packets carrying the EAPMessage attribute respectively.

Figure 3-46 shows the message exchange procedure with EAP-MD5





1. When a user launches the 802.1X client software and enters the registered username and password, the 802.1X client software generates an EAPOL-Start frame and sends it to the device to initiate an authentication process.

2. Upon receiving the EAPOL-Start frame, the device responds with an EAPRequest/Identity packet for the username of the client.

3. When the client receives the EAP-Request/Identity packet, it encapsulates the username in an EAP-Response/Identity packet and sends the packet to the device.

4. Upon receiving the EAP-Response/Identity packet, the device relays the packet in a RADIUS Access-Request packet to the authentication server.

5. When receiving the RADIUS Access-Request packet, the RADIUS server compares the identify information against its user information table to obtain the corresponding password information.

Then, it encrypts the password information using a randomly generated challenge, and sends the challenge information through a RADIUS Access-Challenge packet to the device.

6. After receiving the RADIUS Access-Challenge packet, the device relays the contained EAP-Request/MD5 Challenge packet to the client.

7. When receiving the EAP-Request/MD5 Challenge packet, the client uses the offered challenge to encrypt the password part (this process is not reversible), creates an EAP-Response/MD5 Challenge packet, and then sends the packet to the device.

8. After receiving the EAP-Response/MD5 Challenge packet, the device relays the packet through a RADIUS Access-Request packet to the authentication server.



9. When receiving the RADIUS Access-Request packet, the RADIUS server compares the password information encapsulated in the packet with that generated by itself. If the two are identical, the authentication server considers the user valid and sends to the device a RADIUS Access-Accept packet.

10. Upon receiving the RADIUS Access-Accept packet, the device opens the port to grant the access request of the client. After the client gets online, the device periodically sends handshake requests to the client to check whether the client is still online. By default, if two consecutive handshake attempts end up with failure, the device concludes that the client has gone offline and performs the necessary operations, guaranteeing that the device always knows when a client goes offline.

11. The client can also send an EAPOL-Logoff frame to the device to go offline unsolicitedly. In this case, the device changes the status of the port from authorized to unauthorized and sends an EAP-Failure packet to the client.

3.6.3.2 Configuring Dot1X

Select **Security** > **Dot1x**> **Configuration** from the navigation area. The system automatically displays the 802.1X Global Configuration and Port Configuration, as shown in Figure 3-47 and Figure 3-48. Table 3-22 and Table 3-23 describes the Global Configuration and Port Configuration items.

Figure 3	3- <mark>4</mark> 7 802.1X	Global Config	uration					
Global Co	onfiguration							
	State	: <u>RADIUS Configu</u>	<u>uration</u>	✓ Apply	🛱 Reset			
Port Conf	figuration							
<u> </u>	lit							» Port State
Name	Port Control	Protocol Version	Quiet Period(s)	Tx Period(s)	ReAuth Period(s)	Supp Timeout(s)	Server Timeout(s)	Action

Table 3-22 The 802.1X Configuration items

Item		Description
Global	State	Enables the 802.1X feature on your switch.
Configuration	RADIUS Configuration	Click to jump to the RADIUS configuration interface

Figure 3-48 802.1X Port Configuration



Port Co	nfiguratio	on						
<u> </u>	<u>Edit</u>							» Port State
Name	Port Control	Protocol Version	Quiet Period(s)	Tx Period(s)	ReAuth Period(s)	Supp Timeout(s)	Server Timeout(s)	Action



Table 3-23 The 802.1X port Configuration items

Item		Description
	Name	Physical interface name
	Port Control	Port control mode
	Protocol Version	Eapol protocol version, default version 2
	Quiet Period(s)	Sets the number of seconds that the switch remains in the
		quiet-period following a failed authentication exchange with the
		client. The range is 0 to 65,535 seconds; the default is 60.
		When the switch cannot authenticate the client, the switch remains
		idle for a set period, and then tries again. The idle time is determined
		by the quiet-period value.
	Tx Period(s)	Sets the number of seconds that the switch waits for a response to
		an EAP-request/identity frame from the client before retransmitting
Port		the request. The range is 1 to 65,535 seconds; the default is 30.
Configuration	ReAuth Enabled	Enables periodic reauthentication of the client
		Specifies the number of seconds between reauthentication
		attempts or have the switch use a RADIUS-provided session timeout.
	ReAuth Period(s)	The range is 1 to 65,535; the default is 3600 seconds. This command
		affects the behavior of the switch only if periodic reauthentication is
		enabled.
		Sets the number of seconds that the switch waits for a response to
	Supp Timogut(s)	an EAP-Request/MD5 Challenge frame from the client before
		retransmitting the request. The range is 1 to 65,535 seconds; the
		default is 30.
	Server Timeout(s)	Sets the number of seconds that the switch waits for a response to a
		RADIUS Access-Request packet from the server. The range is 1 to
		65,535 seconds; the default is 30.

3.6.4 MAC Auth

3.6.4.1 Overview

Authentication of MAC addresses is supported using a RADIUS server that contains a database of all valid users.



When the mac-auth option is enabled on any interface, all source MAC addresses from any incoming frame are sent for authentication. If the username and password of the source address are configured in the RADIUS server, then authentication succeeds, otherwise it fails. When authentication succeeds, the source MAC is added to the forwarding table with forwarding enabled. In the case of failure, the source MAC either is added to the forwarding table as discarded or is added to a restricted VLAN.



• If the configured static MAC is the same as the silent MAC, the MAC silent function after the MAC address authentication fails will be invalid.

3.6.4.2 Configuring MAC authentication

Displaying MAC Authentication Summary

Select **Configuration > Security > MAC Authentication** from the navigation area. The system automatically displays the MAC Authentication summary, as shown in Figure 3-49. Table 3-24 describes the MAC Authentication Summary items.

Figure 3-49 Th	e MAC Authentication Su	immary		
Global Configura	tion			
	State: RADIUS Configuration	✓ Apply 🛱 Reset		
Port Configuratio	on			
<u> </u>				» Port State
Name	State	MAC Address Aging	Act	ion
		No Data		

Table 3-24 The MAC Authentication Summary items

Item		Description
Global	State	Enables the 802.1X feature on your switch.
Configuration	RADIUS	Click to jump to the RADIUS configuration interface
	Configuration	
	Name	Physical interface name
Port	State	Display the state of MAC Auth
Configuration	MAC Address Aging	Display the state of MAC Address Aging
	Action	Click to Edit the rule

Configuring MAC Authentication

1. Enable MAC Auth



Select **Configuration** > **Security** > **MAC Authentication** from the navigation area. Click **State** button in "Global Configuration", click **Apply** button to enable the MAC Auth function.

2. Configuring Port

Click **Batch Edit** button below "Port Configuration" to enter the port configuration page, as shown in Figure 3-50. Click **State C** button, select the port to be configured in port panel, click **Ok** button.

Figure 3-50 MAC Authentication Port Configuration Port Configuration	××
State:	
MAC Address Aging:	
Selected 1 AG Port	Copper 🛄 Fiber
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	
	All Revert Deselect

3.6.5 RADIUS

3.6.5.1 Overview

Remote Authentication Dial-In User Service (RADIUS) is protocol for implementing Authentication, Authorization, and Accounting (AAA).

RADIUS is a distributed information interaction protocol using the client/server model. RADIUS can protect networks against unauthorized access and is often used in network environments where both high security and remote user access are required. RADIUS uses UDP, and its packet format and message transfer mechanism are based on UDP. It uses UDP port 1812 for authentication and 1813 for accounting.

RADIUS was originally designed for dial-in user access. With the diversification of access methods, RADIUS has been extended to support more access methods, for example, Ethernet access and ADSL access. It uses authentication and authorization in providing access services and uses accounting to collect and record usage information of network resources.

Client/server model

• Client: The RADIUS client runs on the NASs located throughout the network. It passes user information to designated RADIUS servers and acts on the responses (for example, rejects or accepts user access requests).



• Server: The RADIUS server runs on the computer or workstation at the network center and maintains information related to user authentication and network service access. It listens to connection requests, authenticates users, and returns the processing results (for example, rejecting or accepting the user access request) to the clients.

In general, the RADIUS server maintains three databases: Users, Clients, and Dictionary, as shown in Figure 4-39.

Figure 4-39 RADIUS server components



• Users: Stores user information such as the usernames, passwords, applied protocols, and IP addresses.

• Clients: Stores information about RADIUS clients, such as the shared keys and IP addresses.

• Dictionary: Stores information about the meanings of RADIUS protocol attributes and their values.

Security and authentication mechanisms

Information exchanged between a RADIUS client and the RADIUS server is authenticated with a shared key, which is never transmitted over the network. This enhances the information exchange security. In addition, to prevent user passwords from being intercepted on insecure networks, RADIUS encrypts passwords before transmitting them.

A RADIUS server supports multiple user authentication methods, for example, the Password Authentication Protocol (PAP) and Challenge Handshake Authentication Protocol (CHAP) of the Point-to-Point Protocol (PPP). Moreover, a RADIUS server can act as the client of another AAA server to provide authentication proxy services.

Basic message exchange process of RADIUS

Figure 3-51 illustrates the interaction of the host, the RADIUS client, and the RADIUS server.

Figure 3-51 Basic message exchange process of RADIUS





The following is how RADIUS operates:

1. The host initiates a connection request carrying the username and password to the RADIUS client.

2. Having received the username and password, the RADIUS client sends an authentication request (Access-Request) to the RADIUS server, with the user password encrypted by using the Message-Digest 5 (MD5) algorithm and the shared key.

3. The RADIUS server authenticates the username and password. If the authentication succeeds, it sends back an Access-Accept message containing the user 's authorization information. If the authentication fails, it returns an Access-Reject message.

4. The RADIUS client permits or denies the user according to the returned authentication result. If it permits the user, it sends a start-accounting request (Accounting-Request) to the RADIUS server.

5. The RADIUS server returns a start-accounting response (Accounting-Response) and starts accounting.

6. The user accesses the network resources.

7. The host requests the RADIUS client to tear down the connection and the RADIUS client sends a stop-accounting request (Accounting-Request) to the RADIUS server.

8. The RADIUS server returns a stop-accounting response (Accounting-Response) and stops accounting for the user.

9. The user stops access to network resources





• Do not support RADIUS accounting function

3.6.5.2 Configuring RADIUS

RADIUS global configuration

Select **Configuration > Security > RADIUS** from the navigation area. The system automatically displays the RADIUS Global Configuration, as shown in Figure 3-52. Table 4-19 describes the RADIUS Global Configuration items.

Figure 3-52 The RADIUS Global Configuration							
Global Configuration	n						
Key:	••••• Ø	* Timeout(s):	5	✓ Apply	🛱 Reset		
* Dead Time(min.):	0	* Retransmission:	3				
* Dead Time(min.):	0	* Retransmission:	3				

Table 4-19 The RADIUS Global Configuration items

Item		Description
	Кеу	Global default password configuration; configurable, unreadable; optional configuration
Global	Timeout	Global server timeout; optional configuration
Configuration	Retransmission	Global server retransmissions; optional configuration
	Dead Time	Server death duration; optional configuration; default 0, indicating that the server will be revived immediately after death

RADIU Server configuration

Click **+Add** button below Server Configuration in current page to enter the configuration page, as shown in Figure 3-53. Table 4-20 describes the RADIUS Server Configuration items.

Item	Description
IP	Server IP address
Auth Port	Server authentication port number; default 1812
Кеу	Server key; global configuration when not configured
Timeout	Server timeout; default 5s
Retransmission	Server retransmission times, default 3 times

Table 4-20 The RADIUS Server Configuration items

Figure 3-53 The RADIUS Server Configuration



Server Configuration		X X
* IP;		
Key:		Ø
	➢ Advanced Setting	
* Auth Port:	1812	
* Timeout(s):	5	
* Retransmission :	3	

3.7 Control

3.7.1 Serial Servers

3.7.1.1 Overview

The serial device server is used to connect serial devices to the Ethernet. The serial device server supports bidirectional conversion and transmission of network data and serial data. Serial device server work in tcp-client mode, as shown in Figure 3-53.

Figure 3-53 Serial device server work in tcp-client mode



Serial device server in tcp-client mode provides client connections for TCP network servers. it actively initiates a connection and connect to the server to realize the interaction between serial device and tcp server. The Tcp/Ip and serial data are transparently transmitted in both directions. The serial device server supports to establish multiple TCP Clients to connect to different Tcp Server. Serial device server work in tcp-server mode, as show in Figure 3-54. In TCP Server mode, the module monitors the local port, accepts and establishes a connection for data communication when a connection request is sent. Used for communication with TCP clients within a local area network. It is suitable for scenarios where there is no server in the LAN and there are multiple computers or mobile phones requesting data from the module.

Figure 3-54 Serial device server work in tcp-server mode





3.7.1.2 Configuring Serial Server

Select **Configuration** > **Control** > **Serial Server** from the navigation area. The system automatically displays the Serial Server Configuration page, as shown in Figure 3-55.

Figure 3-55 Serial Server Configuration Summary

Configuration			» State
ID	Mode	Action	<u> </u>
1	none	<u>Edit</u> <u>Clear</u>	

Click **Edit** button to enter Serial Server Configuration page, as shown in Figure 3-56. Table 3-25 describes the Serial Server Configuration items.

Figure 3-56 Serial Server Configuration

Configuration										×	Х
Basic	1				Mode:	none	tcp-clie	ent t	cp-server		
Serial											
Baud Rate:	9600	19200	38400	57600	Parity:	none	even	odd	mark	space	2
Data Bits:	115200 7 8				Stop Bits:	1 2					
Communication											
* Buffer Size(packets):	64				* Interval(ms):	10					
* Max Packet Length(bytes	1460				* Alive Check Time(s):	30					
Server											
* Port:					* Max Connections :	1					



Table 3-25	Serial Server Co	nfiguration items
Item		Description
Basic	ID	Serial port number
	None	Shut down the serial port server
Mode	tcp-client	Configure the working mode to tcp-client
	tcp-server	Configure the working mode to tcp-server
	Baud Rate	The baud rate of the serial port is configured, and there are five kinds of options: 9600, 19200, 38400, 57600, and 115200
Serial	Data Bits	The data bits of the serial port are configured, and there are two kinds of options: 7 and 8
	Parity	There are five types of configuration checksum methods: none, even, odd, mark, and space
	Stop Bits	There are two options for configuring the stop bit, 1 and 2
		Serial port data bits are transmitted at low speed, and the data is transferred
	Buffer size	from the network end to the serial port side to increase the fifo, improve the
		forwarding ability, the range < 0-128>, the default 64
	Max packet	The length of the serial port data packet, beyond the LEGGTH value, the
		packet is forwarded to the network end, the range <0-1460>, the default is
Commu	Longin	1460
nication		If the interval between the bytes before and after the serial port data exceeds
	Interval	MILLISECONDS, the post-byte data is recognized as the new message
		header byte
		The range < 1-1000 >, the default is 10ms
	Alive check	Configure the serial port server to keep alive, during which there is no data
	time	interaction, then active detection is initiated
	Remote IP	Configure the remote connection IP address
Client	Remote port	Configure the port number for the remote connection, ranging from < 1-65535>
	Local port	For optional configurations, the default system is automatically assigned
	Port	Configure the tcp-server port number, which < range from 1-65535>
Server	Max	The maximum number of connections in tcp-server mode, ranging from 1 to
	connections	65535 >

3.7.2 IO Control

IO control module is divided into DI, DO two parts. In current software, DO only supports simple manual control relay (DO) ON/OFF switching function, as shown in Figure 3-57. DI only supports input level high and low judgment, as shown in Figure 3-58.

Figure 3-57 DI Configuration page

REPOTEC Facilitate your Network

Inpu	t			» <u>State</u>
ID	Description		Status	Action
2			high	Apply
Figure	e 3-58 DO Configuration page			
Outp	put			» State
ID	Description	Status	Default Status	Action
1		low \vee	low	<u>Apply</u>

3.8 LoopDetect

3.8.1 Overview

LOOP-DETECT is an Ethernet loop detection protocol, which is used to quickly detect loop faults on downlink interfaces. If a fault is found, LOOP-DETECT will notify the user to manually close or automatically close the relevant port according to the fault handling method configured by the user, so as to avoid affecting the normal data exchange.

Enable control: Enable control is divided into global enable control and port enable control. When the global enable control is enabled and the loop detection is enabled on the port, the port supports the loop detection function.

Loop action: When a loop fault is detected on the port, the user will be notified to manually handle the loop fault by default, and the automatic closing of the port can also be configured. When the port is automatically shut down, the port can recover from the fault by waiting for timeout, shutdown/no shutdown port, recovery command, or restarting the device.

Specify vlan: By default, the port vlan attribute is ignored; if you need to detect whether a loop fault occurs in a specific vlan domain, you can configure the specified vlan on the port, and only detect Whether there is a loop data path in this vlan domain.

The device supports loop fault alarm and loop fault recovery message traps to the snmp server, which is disabled by default.

3.8.2 Configuring LoopDetect

LoopDetect Configuration

1. Select **Configuration** > **LoopDetect** in the navigation area to enter the loopdetect page. This page contains two parts: "Global Configuration" and "Port Configuration".

2. Turn on the loop detection switch in the global configuration page, configure the detection



interval, turn on the Trap switch (optional), and click the **Apply** button to complete theconfiguration, as shown in Figure 3-59, the Table 3-26 describes the items of PoE Global Configuration.

Figure 3-59 LoopDetect Global Configuration

LoopDetect				0 ~ 13
Global Configuration				
LoopDetect: OFF	* Detection Interval(s): 5		Trap: OFF	
		🗸 Apply 💼 Reset		

Table 3-26 Loop detection global configuration items

Items	Description
Loop detection	Turn on/off the loop detection function. The default is to turn off globally and the port.
Detection interval	Configure loop detection interval, range 5-300 seconds, default 5 seconds
Trap	Enable/disable loop fault trap alarm

3. Click the **Batch Edit** button under "Port Configuration" or the **Edit** button behind the port that needs to be configured to enter the loop detection port configuration interface, configure the management status, violation handling method, VLAN domain detection, and select the required. The port that enables this function is shown in Figure 3-60, and the parameter description is shown in Table 3-27.

Figure 3-60 LoopDetect Port Configuration

Port Configuration							х	\times
	Admin State: Disabled	Enable	* Violation handling:	Alarm	Error-down			
D	etection VLANs: OFF							
Selected 1 AG Port	t					Copper		Fibe
10 9								

Table 3-27 Loop detection port configuration items

Items	Description
Admin State	Enable: Enable the loop detection function of the port
	Disabled: Turn off the loop detection function of the port
Violation handling	Alarm: Trap alarm when a loop occurs
	Error-down: When a loop occurs, shut down the loop port.
Detection VLANs	Detect whether a data path loop occurs within the specified vlan domain



4 Advance

4.1 LLDP

4.1.1 Overview

In a heterogeneous network, a standard configuration exchange platform ensures that different types of network devices from different vendors can discover one another and exchange configuration.

The Link Layer Discovery Protocol (LLDP) is specified in IEEE 802.1AB. The protocol operates on the data link layer to exchange device information between directly connected devices. With LLDP, a device sends local device information as TLV (type, length, and value) triplets in LLDP Data Units (LLDPDUs) to the directly connected devices. Local device information includes its system capabilities, management IP address, device ID, port ID, and so on. The device stores the device information in LLDPDUs from the LLDP neighbors in a standard MIB. LLDP enables a network management system to quickly detect and identify Layer 2 network topology changes.

NOTE:

• TLV for PoE-related sections is not supported.

4.1.2 Configuring LLDP

LLDP global Configuration

Select **Advance** > **Layer2** > **LLDP Configuration** in the navigation area to enter the Global Configuration page, as shown in Figure 4-1. Table 4-1 describes the Global Configuration items.

- 1. Click enable button behind "Status".
- 2. Type the boxes behind of the "System Name" and "Description".
- 3. Click **Apply** button to enable LLDP Configuration.

Figure 4-1 LLDP Global Confi	guration		
LLDP Configuration			Q ~ II
Global Configuration			
Status: 🚺	System Name:	Description:	
	✓ Apply 📥 R	Reset	

Table 4-1 LLDP Global Configuration Items

Item	Description
Status	Disabled: global disable
310103	Enabled: global enable
System Name	The name of the device, can be empty



Description	Description of the system, can be empty
Apply	Click to enable

LLDP port setting

1. The LLDP port configuration page appears after global configuration was enabled, as shown

in Figure 4-2.

Figure 4-2 LLDP port configuration status **Port Configuration**

<u> ⊿Batch Edit</u>								»_LLDP State
Name	State	Description	Agent Circuit ID	Locally Assigned	Chassis Type	Port ID Type	Management Address Type	Action
gigabitEthernet0/1	TxRx				mac- address	if-name	ip-address	<u>Edit</u>
gigabitEthernet0/2	TxRx				mac- address	if-name	ip-address	Edit

2. Click **Batch Edit** button below "port configuration" or **Edit** button correspond of the port to enter the page for configuring ports, as shown in Figure 4-3. Table 4-2 describes the configuration items of configuring ports.

Figure 4-3 LLDP port status



Port Configuratio	on									X	Х
State :	Disable	RxOnly	TxOnly		Chassis Ty	/pe:	mac-address	if-alias	if-name	ip-address	
	TxRx						locally-assigned				
Description :					Port ID Ty	/pe:	mac-address	if-alias	if-name	ip-address	
Agent Circuit ID :							agt-circuit-id	locally-a	assigned		
5				Ν	/lanagement Address Ty	/pe:	mac-address	ip-addre	ess		
Locally Assigned :											
Basic 1	Tlvs: 🔽 port-	description	🗸 syste	m-descriptic	on 🔽 management-a	ddres	ss 🔽 system-nar	me 🔽 :	system-capał	pilities	
802.1 1	Tlvs: 🔽 port-	vlanid 🔽	ptcl-identi	ty 🗌 vid-	digest 🔽 vlan-name	~	port-ptcl-vlanid	🔽 link-a	agg 🗌 mg	ımt-vid	
		_									
802.3 1	Tlvs: 🗹 mac-	phy 🔽 m	ax-mtu-siz	e							
Tx Hold: 4				Tx Interval:	30		Reinit	Delay:	2		
Fast Tx: 1				Tx Fast Init:	4		Tx Cred	it Max:	5		
									_		
Selected [1]	AG Port								Ľ	Copper	Fiber
		86 6	4 2 Ър-ър-	2							
10	9	۲ 5	3	 1							

Table 4-2 LLDP port Configuration Items

ltem	Description						
Description	Description of the currently configured LLDP port						
Agent Circuit ID	Agent circuit identification. Can be used as a value for port-id-tlv						
Locally Assigned	Locally Assigned						
	Disabled: No LLDP packets are sent/receive on the interface						
Admin Status	IxOnly: LLDP packets are sent on the interface						
Administatus	RxOnly: LLDP packets are received on the interface						
	TxRx: LLDP packets are sent/receive on the interface						
	Mac-address: indicates the MAC address						
	If-alias: Indicates the interface alias						
Chassis Subtype	If-name: indicates the interface name						
	Ip-address: Indicates the IP address						
	Locally-assigned: indicates local configuration						
	Mac-address: indicates the MAC address						
Port ID Subtype	If-alias: Indicates the interface alias						
	If-name: indicates the interface name						
	Ip-address: Indicates the IP address						
	Agt -circuit-id: Indicates the agt-circuit-id						


	Locally-assigned: indicates locally-assigned value
Management	Mac-address: Device MAC address
Address Subtype	Ip-address: Device IP address
	port-description: port descriptor
	system-description: system descriptor
Basic Tlvs	management-address: management address
	system-name: system name
	system-capabilities: system capabilities
	port-vlanid: port's vlanid
	ptcl -identity: protocol id
900 1 The	vid-digest: vid digest
002.1 1105	vlan-name: vlan name
	port-ptcl - vlanid: port protocol vlanid
	link- agg mgmt -vid: Link Aggregation Management vid
	mac-phy: The rate and duplex status supported by the port, whether it supports port
900 2 Thuc	rate auto-negotiation, whether the auto-negotiation function is enabled, and the
002.3 1105	current rate and duplex status
	max - mtu -size: maximum mtu value
Tybold	Transmission hold, the default value txFastInit is 4, used for packet TTL calculation; TTL=
TX HOID	msgTxInterval * msgTxHold + 1
Tyintonyal	Transfer intervals, default is 30 s; admin can change this value to any value
TX IIII EI VOI	between5and 300.
Poinit dolay	Indicates the amount of delay between when adminStatus becomes ' disabled' and
Keinii deldy	when reinitialization is attempted. The default value of reinitDelay is 2 s.
	Defines the time interval for the timer interval between two transfers within a fast
Fast tx	transfer period (ie txFast is not zero). The default value for msgFastTx is 1;
	administrators can change this value to any value between 1 and 3600.
Ty fact init	This variable is used as the initial value of the txFast variable. This value determines the
	number of LLDPDUs transmitted during the fast transmission period.
Ty ore dit may	Configure the maximum value of txCredit. The default value is 5. Administrators can
Ix credit max	change this value to any value in the range 1 to 10.

View LLDP State

In the current page, click the **LLDP State** button on the right to enter the LLDP state page, as shown in Figure 4-4, and the specific parameters are described as described in Table 4-3.

Figure 4-4 LLDP po	rt statis	STICS						
LLDP Configuration	LLDP State	×						Q ~ E
duto Refre	sh 🔵							<u>LLDP Configuration</u>
Name	Tx	Aged	Rx	Rx Errors	Discards	Discard Tlvs	Unknown Tlvs	Action
gigabitEthernet0/1	29	0	1	0	0	0	0	<u>Clear</u> <u>Neighbor</u>

Figure 4-4 LLDP port statistics



Table 4-3 LLDP port Configuration Items

Item	Description
Name	Description of the currently configured LLDP port
Тх	The number of packets sented on the interface
Aged	The number of packets aged on the interface
Rx	The number of packets received on the interface
Rx Errors	The number of error packets received on the interface
Discards	The number of packets discarded on the interface
Discard Tlvs	The number of tlv packets of discarded on the interface
Unknown Tlvs	The number of unknown tlvs packets on the interface
CLEAR	Clear counters on the current interface

View neighbor information

On the current LLDP state page, click the '**Neighbor**' button of the corresponding port to enter the neighbor information view interface.

Figure 4-5 LLDP neighbor information gigabitEthernet0/1

Х

Neighbor : F8-E4-3B-53-74-58 System Name : System Description : Port Description : TTL : 3601 System Capabilities : Routing Mandatory TLVs : CHASSIS ID TYPE : Chassis MAC Address: f8e4.3b53.7458 PORT ID TYPE : Port MAC Address: f8e4.3b53.7458 8021 ORIGIN SPECIFIC TLV Port Vlan id :0 PP Vlan id :0 Remote Protocols Advertised : Remote VID Usage Digest : 0 Remote Management Vlan : 0 Link Aggregation Status : Disabled Link Aggregation Port ID : 0 8023 ORIGIN SPECIFIC TLV AutoNego Support : Supported Enabled AutoNego Capability : 1 Operational MAU Type : 0 Max Frame Size : 0 MED Capabilities : Capabilities MED Capabilities Dev Type : End Point Class-1 MED Application Type : Reserved MED Vlan id : 0 MED Tag/Untag: Untagged MED L2 Priority : 0 MED DSCP Val : 0

4.2 IGMP Snooping

Internet Group Management Protocol Snooping (IGMP snooping) is a multicast constraining mechanism that runs on Layer 2 devices to manage and control multicast groups.



4.2.1 Principle of IGMP snooping

By analyzing received IGMP messages, a Layer 2 device running IGMP snooping establishes mappings between ports and multicast MAC addresses and forwards multicast data based on these mappings. As shown in Figure 4-6, when IGMP snooping is not running on the switch, multicast packets are flooded to all devices at Layer 2. However, when IGMP snooping is running on the switch, multicast packets for known multicast groups are multicast to the receivers, rather than broadcast to all hosts, at Layer 2.



Figure 4-6 Multicast forwarding before and after IGMP snooping runs

4.2.2 Configure the IGMP Snooping

4.2.2.1 Global Configuration

Select **Advance** > **Layer2** > **IGMP Snooping Configuration** in the navigation area to enter the Global Configuration page, as shown in Figure 4-7. Table 4-4 describes the IGMP snooping configuration items.

Figure	4-7	IGMP	Global	Config	uration
iguic	T /		Ciobai	Coning	oranori

J					
IGMP Snooping Configuration					
Global Configuration					
State: 💽	Discard Unknown Multicast TC Suppression	🗸 Apply	🛱 Reset		

Item		Description
	Stato	Disabled: global disable
	Sidle	Enabled: global enable
Global	Discard Unknown	If this option is enabled, unknown multicast traffic will be dropped by
Configuration	Multicast	switch.



TC Suppression	If this option is enabled, topology change event will be ignored by
IC suppression	switch

4.2.2.2 IGMP Mrouter Interface Configuration

1. Select Advance > Layer2 > IGMP Snooping Configuration in the navigation area to enter the IGMP Mrouter Interface page shown in Figure 4-8. Table 4-5 describes the IGMP Mrouter Interface configuration items.

Figure 4-8 IGMP Mrouter Interface
M-router Interface

in router internace	-		
+ <u>Add</u>			IGMP Snooping State
VID	Interface	Action	



Table 4-5 IGMP IGMP Mrouter Interface items

Item		Description		
IGMP Mrouter	VID	VLAN ID		
Interface	Interface	Interface Name.		
	Delete	Click to delete this entry.		

2. Click the **+Add** button to create an IGMP Mrouter Interface, as shown in Figure 4-9. Configure 'Vid', 'Interface', click **Ok**.

Figure 4-9 Creating IGMP Mrouter Interface

M-router Interface	×	Х	
* VID:		V	
* Interface :		\vee	

4.2.2.3 IGMP Static Group Configuration

1. Select Advance > Layer2 > IGMP Snooping Configuration in the navigation area to enter the IGMP Static Group page shown in Figure 4-10. Table 4-6 describes the IGMP Static Group configuration items.

Figure 4-10 IGMP Static Group



Static Gro	up			
+ <u>Add</u>				IGMP Snooping State
VID	Group Address	Source Address	Interface	Action



Table 4-6 IGMP IGMP Static Group items

ltem		Description	
	VID	VLAN ID	
IGMP Static Group	Group Address	Group IP address	
	Source Address	Source IP address	
	Interface	Interface name.	
	Delete	Click to delete this entry.	

2. Click the **+Add** button to create an IGMP Static Group, as shown in Figure 4-11. Configure 'Vid', 'Group Address', 'Source Address', 'Interface', click **Ok**.

tatic Group	× ×
* VID:	V
* Interface:	\sim
* Group Address:	
Source Address:	

4.3 MAC Management

4.3.1 Overview

A device maintains a MAC address table for frame forwarding. Each entry in this table indicates the MAC address of a connected device, to which interface this device is connected and to which VLAN the interface belongs. A MAC address table consists of two types of entries: static and dynamic. Static entries are manually configured and never age out. Dynamic entries can be manually configured or dynamically learned and will age out.

Your device learns a MAC address after it receives a frame from a port, port A for example, as it executes the following steps.

1. Checks the frame for the source MAC address (MAC-SOURCE for example).

2. Looks up the MAC address table for an entry corresponding to the MAC address and do the following:

• If an entry is found for the MAC address, updates the entry.



• If no entry containing the MAC address is found, adds an entry that contains the MAC address and the receiving port (port A) to the MAC address table.

3. After the MAC address (MAC-SOURCE) is learned, if the device receives a frame destined for MAC-SOURCE, the device looks up the MAC address table and then forwards the frame from port A.

When forwarding a frame, the device adopts the following forwarding modes based on the MAC address table:

- Unicast mode: If an entry matching the destination MAC address exists, the device forwards the frame directly from the sending port recorded in the entry.
- Broadcast mode: If the device receives a frame with the destination address being all Fs, or no entry matches the destination MAC address, the device broadcasts the frame to all the ports except the receiving port.

Figure 4-11 MAC address table of the device



4.3.2 Configuring MAC addresses

MAC addresses configuration includes the configuring and displaying of static MAC address, Filter MAC Address, and the setting of MAC address entry aging time.

Global Configuration

1. Select **Advance** > **Layer2** > **MAC Configuration** in the navigation area to enter the MAC global Configuration page shown in Figure 4-12. Table 4-7 describes the MAC Configuration items.



MAC Configuration				0 ~
Global Configuration				
Aging Time(s):	300	🗸 Apply	🛱 Reset	
Table 4-7 MAC global config	uration items			



Item		Description
Global	Aging time	Set the aging time for the MAC address, the default value is 300 seconds.
configuration	Apply	Click to enable

Configuring static MAC address

 Select Advance > Layer2 > MAC Configuration in the navigation area to enter the Static MAC Address Configuration page shown in Figure 4-13.

Figure 4-13 MAC static address page Static MAC Address +Add MAC Address VID Interface Action

2. Click +Add to enter the page for creating static MAC address, as shown in Figure 4-14. Table

4-8 shows the detailed configuration for creating a static MAC address.

3. Type in **MAC address** box, for example '00eb.fc00.8877', select the **VID** in the VLAN drop down list, select the **Interface** in the Interface drop list.

XX

4. Click **Ok** to end the operation.

Figure 4-14 Creating static MAC address

Static MAC Address

* MAC Address		
* VIE):	\vee
* Interface		\vee

Table 4-8 Static MAC Address items

ltem		Description
Static	MAC Address	Set the MAC address to be added.
Mac Address	VID	Sets the ID of the VLAN to which the MAC address belongs.
/ GGI055	Interface	Sets the port to which the MAC address belongs.

Configuring Filter MAC address

1. Select Advance > Layer2 > MAC Configuration from the navigation area. The system automatically displays the Filter MAC Address page, as shown in Figure 4-15.



Figure 4-15 MAC static address page Filter MAC Address			
MAC Address	VID	Action	

No Data

- 2. Click +Add to enter the page for creating filter MAC address, as shown in Figure 4-16. Table
- 4-9 shows the detailed configuration for creating a filter MAC address.
- 3. Type in MAC address, for example '00eb.fc00.8877', select the VID in the VLAN drop down list.
- 4. Click **Apply** to end the operation.

Figure 4-16 Creating Filter MAC address

Filter MAC Address		х	×
* MAC Address:			
* VID:			\vee

Table 4-9 Filter MAC Address items

Item		Description
Static Mac	MAC Address	Set the MAC address to be filtered.
Address	VID	Sets the ID of the VLAN to which the MAC address belongs.

4.4 DHCP Snooping

4.4.1 Overview

DHCP snooping (Dynamic Host Configuration Protocol) is a security feature that acts like a firewall between untrusted hosts and trusted DHCP servers. When DHCP snooping is enabled on a VLAN, the system examines DHCP messages sent from untrusted hosts associated with the VLAN and extracts their IP addresses and lease information. This information is used to build and maintain the DHCP snooping database.

DHCP snooping is enabled on a per-VLAN basis. By default, the feature is inactive on all VLANs. You can enable the feature on a single VLAN or a range of VLANs.

Trusted Sources

The DHCP snooping feature determines whether traffic sources are trusted or untrusted. DHCP snooping acts as a guardian of network security by keeping track of valid IP addresses assigned to downstream network devices by a trusted DHCP server. The default trust state of all interfaces is untrusted.



DHCP Snooping Limit Rate

Configure the number of DHCP packets per second that an interface can receive, to reduce or eliminate the impact of DHCP packet attack from this interface.

MAC Address Verification

With DHCP snooping MAC address verification enabled, DHCP snooping verifies that the source MAC address and the client hardware address match in DHCP packets that are received on untrusted ports. The source MAC address is a Layer 2 field associated with the packet, and the client hardware address is a Layer 3 field in the DHCP packet.

Option-82 Insertion

DHCP Option82 option is also called DHCP relay agent information option, one of many dhcp options. The Option82 option is a DHCP option proposed to enhance the security of the DHCP server and improve the IP address allocation strategy. The addition and stripping of options are implemented by the relay component.

DHCP Database

The DHCP snooping feature dynamically builds and maintains the database using information extracted from intercepted DHCP messages. The database contains an entry for each untrusted host with a leased IP address if the host is associated with a VLAN that has DHCP snooping enabled. The database does not contain entries for hosts connected through trusted interfaces. When the Ip verify source function is enabled on the interface, database entries act as valid users on the interface.

4.4.2 Configuring DHCP Snooping

Configuring DHCP Snooping globally

1. Select **Advance** > **Layer2** > **DHCP Snooping** from the navigation tree to enter the DHCP Snooping Configuration page, as shown in Figure 4-17. Table 4-10 describes the configuration items of configuring DHCP Globally.

DHCP Snooping Configuration			
Global Configuration			
Status:	* VLAN list:	1-4094	Verify mac-address:
Option-82:	DB write-delay(second):		
		✓ Apply	

Figure 4-17 DHCP Snooping global configuration

Table 4-10 The description of DHCP Snooping global configuration

Item	Description
Status	Enable/Disable the DHCP Snooping globally



Vlan	Enable/Disable the DHCP Snooping on the vlans
Verify mac-address	Verify the source MAC address and the client hardware address is matched in DHCP packets
option-82	Enable/Disable option-82 insertion
DB write-delay(s)	Configure the interval time database writing to flash

Configuring DHCP Snooping ports

1. Select Advance > Layer2 > DHCP Snooping from the navigation tree, as shown in Figure 4-18.

Figure 4-18 DHCP Snooping interface configuration status				
Port Configuration				
<u> </u>			» DHCP Snooping State	
Name	Trust	Ratelimit(pps)	Action	
gigabitEthernet0/1	Disable		Edit	
gigabitEthernet0/2	Disable		Edit	

2. Click **Batch Edit** button below "port configuration" or **Edit** button correspond of the port to enter the page for configuring ports.

3. Check the ports to be configured, click **EDIT** to enter the interface configuration page as shown in Figure 4-19. Table 4-11 describes the configuration items of configuring DHCP snooping interface configuration.

X X

Figure 4-19 DHCP Snooping global configuration

Port Configuration

Trust:		Ratelimit(pps):			
Selected 1 AG Port				Coppe	er 🗌 Fiber
10 9	$\begin{array}{cccccccccccccccccccccccccccccccccccc$				
		A	AII	Revert	Deselect

Table 4-11 The description of DHCP snooping interface configuration

Item	Description
Trust	determines whether traffic sources are trusted or untrusted
Ratelimit(pps)	Configure the number of DHCP packets per second that an interface can receive



NOTE:

 Due to hardware limitations, for DHCP rate limit, when the limit value is not 0, the software rate limit is used, and when the limit value is 0, the hardware rate limit is used. Software rate limit will consume CPU resources.

View DHCP Snooping state

1. Click the **DHCP Snooping state** button in the current page to enter the DHCP Snooping state page, as shown in Figure 4-20. Table 4-12 describes the configuration items of configuring DHCP Snooping database.

Figure 4-20 DHCP Snooping database

DHCP Sn	ooping State					Q ~ [I]
🖽 Read	🖲 Write 🛛 📩 Clear Flash	duto Refresh)	٩	» <u>DHCP Sn</u>	ooping Configuration
VLAN	Interface	MAC Address	IP Address	Lease Time(s)	Туре	Action

Table 4-12 The description of DHCP Snooping database

Item	Description		
Search	Search database entries by fuzzy match the input strings		
WRITE	Write database entries to flash		
READ	Read database entries from flash		
CLEAR	Clear database entries, you can narrow the scope by selecting keywords		

4.5 QinQ

4.5.1 Overview

Introduction to QinQ

QinQ stands for 802.1Q in 802.1Q. QinQ is a flexible, easy-to-implement Layer 2 VPN technology based on IEEE 802.1Q. QinQ enables the edge device on a service provider network to insert an outer VLAN tag in the Ethernet frames from customer networks, so that the Ethernet frames travel across the service provider network (public network) with double VLAN tags. QinQ enables a service provider to use a single SVLAN to serve customers who have multiple CVLANs.

Background and benefits

The IEEE 802.1Q VLAN tag uses 12 bits for VLAN IDs. A device supports a maximum of 4094 VLANs. This is far from enough for isolating users in actual networks, especially in metropolitan area networks (MANs).



By tagging tagged frames, QinQ expands the available VLAN space from 4094 to 4094 \times 4094. QinQ delivers the following benefits:

- Releases the stress on the SVLAN resource.
- Enables customers to plan their CVLANs without conflicting with SVLANs.
- Provides an easy-to-implement Layer 2 VPN solution for small-sized MANs or intranets.
- Allows the customers to keep their VLAN assignment schemes unchanged when the service provider upgrades the service provider network.

4.5.2 QinQ configuration

VPN Configuration

1. Select **Advance** > **Layer2** > **QinQ configuration** in the navigation area. The system automatically enters the page as shown in Figure 4-21.

Figure 4-21 VPN Configuration	tion summary		
VPN Configuration			
+ <u>Add</u>			QinQ Information
Name	Rules	Action	

2. Click **+Add** button below "VPN Configuration" to enter the VPN rule creating page, as shown in Figure 4-22, Table 4-13 describes the items of configuring a QinQ rule.

Figure 4-22 VPN Co VPN Configuration	onfiguration			:	×	Х
* Name :						
* CVID List#1:		* SVID#1:		-		
			H	H		

Itom	Description
пенн	Description
Nama	
Name	
CVID	The ID of the customer VLAN
SVID	The ID of the service provider VLAN

Port Configuration



1. Select **Advance** > **Layer2** > **QinQ configuration** in the navigation area. The system automatically enters the page as shown in Figure 4-24.

Figure 4-24 Port Configuration summary

Port Configuration				
<u> </u>				<u>QinQ Information</u>
Name	Basic	VLAN Stacking	VLAN Mapping	Action
gigabitEthernet0/1	Disable			Edit
gigabitEthernet0/2	Disable			Edit

2. Click **Batch Edit** button below "Port Configuration" or **Edit** button correspond of the port to enter the QinQ port configuration page, as shown in Figure 4-25, Table 4-14 describes the items of configuring port.

Figure 4-25 Port Configuration

Port Configuration	× ×
Basic:	
VLAN Stacking:	~
VLAN Mapping:	~
Selected 1 AG Port	Copper D Fiber
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	
	All Revert Deselect

Table 4-14 The description of configuring a QinQ rule

Item	Description
Basic	Enable VLAN mapping mode
VLAN Stacking	Multi-layer tag mode
VLAN Mapping	tag replacement mode

4.6 ACL

4.6.1 Overview

An access control list (ACL) is a set of rules (or permit or deny statements) for identifying traffic based on criteria such as source IP address, destination IP address, and port number. ACLs are essentially used for packet filtering. A packet filter drops packets that match a deny rule and



permits packets that match a permit rule. ACLs are also widely used by many modules, for example, QoS and IP routing, for traffic identification.

4.6.2 Configuring Acls



- NOTE:
 - ◆ A maximum of 128 rules can be configured under a single ACL-ID; due to hardware resource limitations, please refer to the specific product specification document for the maximum number of application rules supported by a single device.
- When an ACL has been applied to a port, if you need to add and delete rules, you must first unapply them from the port.

Configuring a rule for an IP ACL

1. Select Advance > Security > ACL Configuration in the navigation area.

2. Click the **+ADD ACL** button to enter the rule configuration page and choose the ACL type '**IP**' for a basic ACL as shown in Figure 4-26. Table 4-15 describes the configuration items of configuring an IP ACL.

Figure 4-26. Configuring a basic IP AC ACL Configuration	:L X X
Type:	IP IP-Extend IPV6 MAC
* Name :	
Count Enable:	ON OFF
Initial SN:	
Space:	
Description:	

Table 4-15 The description of the basic IP ACL

Item		Description
ACL Type	IP	Standard IP ACL can match the source IP field in IPv4 packets
	IP-Extend	the protocol number, source IP address, destination IP address, Layer 4 port number, etc. of IPv4 packets
	IPV6	IPv6 ACL can match IPv6 packet source IP address, destination IP address, protocol number, etc
	МАС	MAC ACL, which can match destination MAC address, source MAC address, Etype and other fields
Name		Standard IP valid number range: <1-99> <1300-1999> Extended IP valid number range: <100-199> <2000-2699>



MAC ACL valid number range: <200-699>		
	IPv6 ACL only supports string naming. All ACLs support string naming.	
	The string length range is <1-64>	
Count Enable	Enable the counting function. When a packet hits the ACL, the count value is increased by 1	
Initial SN	Starting value of rule entry sequence number, default value: 10, range <1-2147483647>	
Space	Increment the serial number, default value: 10, range <1-2147483647>	
Description	Define the ACL description information	

3. Configure a rule for an IP ACL, and click **Ok**.

4. Select IP rule in the box below "ACE Configuration" and click **+Add ACE** button to enter ACE configuration page as shown in Figure 4-27. Table 4-16 describes the configuration items of configuring an IP ACE configuration.

Figure 4-27 IP Type ACE Configuration Interface ACE Configuration

Name:	1
Type:	Ib
* Access Control:	permit deny
SN:	
* Src Address:	
* Src Mask:	

××

Table 4-16 The description of the IP type ACL

ltem		Description
Access	permit	Release the packets that match this rule
Control	deny	Discard packets matching this rule
SN		Rule entry sequence number
Src Address		Source IP address, such as 192.168.64.1
Src Mask		The IP mask is inverted. If it matches the first 24 digits of the IP address, the mask is
		255.255.255.0. Here it needs to be configured as 00.00.00.255

5. Configure ACE and click **Ok**.

4. Click **Batch Edit** below "Port Configuration" to enter the ACL port configuration page, select the ACL rules of the corresponding port, as shown in Figure 4-28, and click **Ok**.

Figure 4-28 Apply the ACL rule to the port



Port Configuration				× ×
	In:	1	\sim	
	Out:	1	\vee	
Selected 1 AG Port				Copper D Fiber
10 9				

Configuring a rule for an IP-Extend ACL

1. Select Advance > Security > ACL Configuration in the navigation area.

2. Click the +ADD ACL button to enter the rule configuration page and choose the ACL type

'IP-Extend' for a basic ACL as shown in Figure 4-26.

3. Configure a rule for an IP ACL, and click **Ok**.

4. Select ACK rules in the box below "ACE Configuration" and click **+Add ACE** button to enter ACE configuration page as shown in Figure 4-29. Table 4-17 describes the configuration items of configuring an IP ACE configuration.

 $\times \times$

Figure 4-29 IP-Extend Type ACE Configuration Interface ACE Configuration

Name:	100
Type:	IP-Extend
* Access Control:	permit deny
SN:	
* Protocol:	
* Src Address:	
* Src Mask:	
* Dest Address:	
* Dest Mask:	

Table 4-17 The description of the IP-Extend ACL

Item		Description
Access	permit	Release the packets that match this rule
Control	deny	Discard packets matching this rule



SN	Rule entry sequence number		
	Supports common protocol message options, including tcp, udp, vrrp, igmp, gre,		
Protocol	ipcomp, ospf, pim, rsvp, etc.		
FICIOCOI	Supports all IP v4 packets		
	IPv4 messages of customized protocol		
Src Address	Source IP address, such as 192.168.64.1		
Sre Mark	The IP mask is inverted. If it matches the first 24 digits of the IP address, the mask is		
SIC MUSK	255.255.255.0. Here it needs to be configured as 00.00.00.255		
Dest Address	Destination IP address, such as 192.168.64.100		
Dest Mask	homology mask		

5. Configure ACE and click **Ok**.

6. Click **Batch Edit** below "Port Configuration" to enter the ACL port configuration page, select the ACL rules of the corresponding port, and click **Ok**.

Configuring a rule for an IPV6 ACL

1. Select Advance > Security > ACL Configuration in the navigation area.

2. Click the **+ADD ACL** button to enter the rule configuration page and choose the ACL type **'IPV6'** for a basic ACL as shown in Figure 4-26.

3. Configure a rule for an IP ACL, and click **Ok**.

4. Select ACL rules in the box below "ACE Configuration" and click +Add ACE button to enter

ACE configuration page as shown in Figure 4-30. Table 4-18 describes the configuration items of configuring an IP ACE configuration.

Igure 4-30 IPV6 Type ACE Configuration Inferface ACE Configuration		
Name: A	A130	
Type: I	PV6	
* Access Control:	permit deny	
SN:		
* Protocol:		
* Src Address:		
* Src Mask:		
* Dest Address:		
* Dest Mask:		



Table 4-18 The description of the IPV6 ACL

Table 4-18 The description of the IPV6 ACL				
Item		Description		
Access Control	permit	Release the packets that match this rule		
	deny	Discard packets matching this rule		
SN		Rule entry sequence number		
Protocol		Supports common protocol message options , including tcp , udp , icmp , etc. Supports all IP v 6 packets Support IPv6 messages of customized protocol		
Src Address		Source MAC address, such as 00.d 0.f 8.22.33.40		
Src Mask		The MAC address mask is inverted. If it matches the first 24 digits of the MAC address , the mask is ffff.ff00.0000. Here it needs to be configured as 0000.00 ff.ffff		
Dest Address		Destination MAC address, such as 00.d 0.f 8.22.33.41		
Dest Mask		homology mask		

5. Configure ACE and click **Ok**.

6. Click **Batch Edit** below "Port Configuration" to enter the ACL port configuration page, select the ACL rules of the corresponding port, and click **Ok**.

Configuring a rule for an MAC ACL

1. Select Advance > Security > ACL Configuration in the navigation area.

2. Click the **+ADD ACL** button to enter the rule configuration page and choose the ACL type **'IPV6'** for a basic ACL as shown in Figure 4-26.

3. Configure a rule for an IP ACL, and click **Ok**.

4. Select ACK rules in the box below "ACE Configuration" and click **+Add ACE** button to enter ACE configuration page as shown in Figure 4-31. Table 4-19 describes the configuration items of configuring an IP ACE configuration.

Figure 4-31 Apply the ACL rule to the port



ACE Configuration

		х	\times
Name:	abc		
Type:	MAC		
* Access Control:	permit deny		
SN:			
Ethertype:			
CoS:			
* Src Address:			
* Src Mask:			
* Dest Address:			
* Dest Mask:			

Table 4-19 The description of the MAC ACL

Item		Description	
Access	permit	Release the packets that match this rule	
Control	deny	Discard packets matching this rule	
SN		Rule entry sequence number	
Ethertype		Ethernet protocol type, range (0x05DD-0xFFF)	
CoS		Cos value of the message, range (0-7)	
Src Address		Source MAC address, such as 00.d0.f 8.22.33.40	
Src Mask		The MAC address mask is inverted. If it matches the first 24 digits of the MAC address, the mask is ffff.ff00.0000. Here it needs to be configured as 0000.00ff.ffff	
Dest Address		Destination MAC address, such as 00.d0.f 8.22.33.41	
Dest Mask		homology mask	

5. Configure ACE and click **Ok**.

6. Click **Batch Edit** below "Port Configuration" to enter the ACL port configuration page, select the ACL rules of the corresponding port, and click **Ok**.

4.7 QoS

4.7.1 Overview

Quality of Service (QoS) reflects the ability of a network to meet customer needs. In an internet, QoS evaluates the ability of the network to forward packets of different services. The evaluation can be based on different criteria because the network may provide various services. Generally,



QoS performance is measured with respect to bandwidth, delay, jitter, and packet loss ratio during packet forwarding process.

4.7.2 Configuring Qos

Enable Qos

1. Select **Advance** > **Security** > **Qos Configuration** in the navigation area to enter the QoS Global Configuration page, as shown in Figure 4-32. Table 4-20 describes the QoS summary items.

Figure 4-32 QoS Global Configura	tion	
QoS Configuration		Q
Global Configuration		
State:	* Algorithm: sp wrr	✓ Apply

2. Click State button, choose Algorithm, **click** Apply to enable Qos.

Table 4 20 Descriptions of Q05 softimary				
Items	Description			
	State		Enable QOS, all QOS functions do not support configuration before	
			enabling	
0.00	Algorithm		Absolute priority scheduling, the queue ID is large, the priority is high,	
Qos Configuration		Sp	and the low-priority queue is processed after the high -priority	
			queue is processed.	
		Wrr	robin scheduling algorithm schedules each queue in turn according to	
			the queue weight, from the largest to the smallest queue ID.	

Table 4-20 Descriptions of QoS summary

QoS Mapping

1. In current page, click **Queue** button below "Qos Mapping" to enter Queue Configuration page, as shown in Figure 4-33. Table 4-21 describes the QoS summary items.

Figure 4-33 QoS Queue Configuration

Queue Configuration		X X
Queue	Weight	
0	1 ∨	
1	1 ~	

Table 4-21 Descriptions of Queue Configuration

Items	Description	
	Queue	< 0, 7 >
Queue weight	weight	< 0, 32>, the larger the value, the higher the weight, and the higher the probability of preferential processing of packets in this queue under the



condition of channel congestion, 0 means infinity.

2. Click **Cos** button below "Qos Mapping" to enter Cos Configuration page, as shown in Figure 4-34. Table 4-22 describes the Cos configuration items.

Figure 4-34 QoS Cos Configuration

CoS Configuration	0		X X
CoS	Queue	DSCP	
0	0 ~	0 \	
1	1 ~	8 ~	

Table 4-22 Descriptions of Cos Configuration

Items		Description
	CoS	<0, 7>
		< 0, 7>, Cos - queue mapping relationship, based on the cos marked on the port,
CoS	Queue	modifying the packet egress queue takes effect when the port is configured
Configuration		as no trust, trust cos or trust dscp and non-ip packets.
		cos-dscp mapping relationship takes effect when the port is configured as no trust,
		trust cos or trust dscp and is not ip packets. Modify the packet dscp value.

3. Click **DSCP** button below "Qos Mapping" to enter DSCP Configuration page, as shown in Figure 4-35. Table 4-23 describes the DSCP configuration items.

Figure 4-35 QoS Cos Configuration

DSCP Configura	ation			23	X
+ <u>Add</u>					
DSCP	Queue	CoS	New DSCP	Action	
		No Data			

Table 4-23 Descriptions of Cos Configuration

Items		Description
DSCP		<0, 63>
Queue		< 0, 7>, dsp-queue mapping relationship, which takes effect when the port is
		configured as trust dscp and ip packets, modify the packet export queue
DSCP	CoS	< 0, 7>, dscp-cos mapping relationship, which takes effect when the port is
Мар		configured as trust dscp and ip packets, modify the cos field of the packet
	Nes DSCP	< 0, 63 >, dscp-dscp mapping relationship, which takes effect when the port is



configured as trust dscp and ip packets, first perform dscp-dscp mapping, and
then perform dscp-cos mapping

5.7

V

Class Setting

1. In current page, click **+Add** button below "Class Setting" to enter Class Setting page, as shown in Figure 4-36. Table 4-24 describes the QoS summary items.

Figure 4-36 Class Setting page

Class Setting

								 2.5
* Name:								
* Match Type:	acl	etype	dscp	cos	14	vlan-range	vlan	

Table 4-24 Descriptions of Class Setting

Items		Description
Class Setting	Name	Create a category, define the category name
	Match	Define match type, support associated ACL;
		Support packet etype, dscp, cos, l4port, vlan field matching

Policy Setting

1. In current page, click **+Add Policy** button below "Policy Setting" to enter Policy Setting page, as shown in Figure 4-37. Text the box behind "Name", click **Ok** button.

Figure 4-37 Class Setting page

Policy Setting		х	Х
* Name :	1		

2. Click **+Add Policy Rule** button below "Policy Setting" to enter Policy Rule Setting page, as shown in Figure 4-38. Table 4-26 describes the QoS Rule Configuration items.

Figure 4-38 Rule Configuration page



Rule Configuration

Name:	2				
* Class Name:					×
Modify:	none	COS	dscp	vlan	
Ratelimit:					
* CIR(kbps):					
* CBS(kByte):					

Table 4-26 Descriptions of Class Setting

Items		Description
	Name	Rule name
	Class Name	Create a policy, define a policy name
Rule	Modify	policy, supports modifying cos, dscp, vlan and other actions
Configuration	Ratelimit	Action 2 corresponding to the strategy, speed limit
	CIR	Speed limit waterline, unit kbps
	CBS	burst capability, unit Kbyte

Port Configuration

1. In current page, click **+Batch Edit** button below "Port Configuration" to enter Port Configuration page, as shown in Figure 4-39. Table 4-27 describes the Port Configuration items.

Figure 4-39 Port Configuration page

Port Configuration		× ×
	* Default CoS: 0	
	Trust: none cos dscp	
	Ingress Policy: 🚺 1 🗸	
Selected 1 AG Port		Copper 🔲 Fiber
10 9		

All Revert Deselect

X X

Table 4-27 Descriptions of Port Configuration

Items		Description
Port	Default	< 0, 7>, when the configuration port is not trusted, or the configuration is
Configuration	CoS	trusted but the message does not meet the trust condition, the port
Conngeranon		default cos is used to mark the ingress message



	Support untrust, trust cos, trust dscp configuration. When in no trust mode, the
	entry stage modifies the cos field and dscp field of the message
	according to the default cos of the port; when trust cos is configured, the
Trust	same as the no trust mode for untagged messages, and for tagged
	messages, choose the message with its own cos; When configuring trust
	dscp, for ip packets, select the packet with dscp, and for non-ip packets,
	it is the same as trust cos mode.
Ingress	Cale at la grant Daliau
Policy	

4.8 Route

4.8.1 ARP

4.8.1.1 Overview

ARP resolves an IP address into a physical address, such as an Ethernet MAC address.

On an Ethernet LAN, a device uses ARP to get the MAC address of the target device for a packet

ARP table

After obtaining the MAC address for the destination host, the device puts the IP-to-MAC mapping into its own ARP table. This mapping is used for forwarding packets with the same destination in the future.

An ARP table stores dynamic and static ARP entries.

Dynamic ARP entry

ARP automatically creates and updates dynamic entries. A dynamic ARP entry is removed when its aging timer expires or the output interface goes down, and it can be overwritten by a static ARP entry.

Static ARP entry

A static ARP entry is manually configured and maintained. It cannot get aged or be overwritten by a dynamic ARP entry.

Static ARP entries protect communication between devices, because attack packets cannot modify the IP-to-MAC mapping in a static ARP entry.

4.8.1.2 Configuring Static ARP

Displaying Static ARP

1. Select **Monitor** > **ARP Information** in the navigation area to enter Static ARP displaying page as shown in Figure 4-40. Table 4-28 describes the configuration items of static ARP.

Figure 4-40 Port Configuration page



ARP Information			0 × I
<u>ि Clear</u> Auto Refresh	Q		» <u>Static ARP</u>
IP Address	MAC Address	Interface	Туре
192.168.56.2	00:0e:c6:58:f5:9e	tap0	Dynamic

Table 4-28 Descriptions of Static ARP

100010 1 20 2 0000	
Item	Description
IP Address	Terminal IP address
MAC Address	Terminal MAC address
Interface	The name of the Layer 3 interface where the terminal is located
Туре	ARP address type

Configuring Static ARP

1. Select **Advance** > **Layer3** > **Static ARP** in the navigation area to enter Static ARP configration page as shown in Figure 4-41.

- 2. Click +Add button to enter the crating page as shown in Figure 4-42.
- 3. Configure the IP address and MAC address.
- 4. Click **OK** button to complete the configuration.

Figure 4-41 Static ARP (Configuration page		
Static ARP			
+ <u>Add</u>			>> ARP Information
IP Address	MAC Address		Action
	No	Data	
Figure 4-42 Creating a r	new Static ARP		
Static ARP		X X	
* IP Add	tress :		
* MAC Add	fress:		

4.8.2 Route

Routers are responsible for routing packets on the Internet. A router selects an appropriate route according to the destination address of a received packet and forwards the packet to the next router. The last router on the path is responsible for sending the packet to the destination host.

4.8.2.1 Routing table



Routers forward packets through a routing table. Each entry in the table specifies which physical interface a packet should go out to reach the next hop (the next router) or the directly connected destination.

Routes in a routing table fall into three categories by origin:

- Direct routes: Routes discovered by data link protocols, also known as interface routes.
- Static routes: Routes that are manually configured.
- Dynamic routes: Routes that are discovered dynamically by routing protocols.

A route entry has the following items:

• Destination IP address: Destination IP address or destination network.

• Mask (IPv4)/prefix length (IPv6): Specifies, together with the destination address, the address of the destination network.

• Outbound interface: Specifies the interface through which a matching IP packet is to be forwarded.

• Next hop: Specifies the address of the next hop router on the path.

• Preference for the route: Routes to the same destination may be found by various routing protocols or manually configured, and routing protocols and static routes have different priorities configured. The route with the highest priority (the smallest value) will be selected as the optimal route.

4.8.2.2 Static Route

A static route is manually configured. If a network 's topology is simple, you only need to configure static routes for the network to work normally. The proper configuration and usage of static routes can improve network performance and ensure bandwidth for important network applications.

The disadvantage of using static routes is that they cannot adapt to network topology changes. If a fault or a topological change occurs in the network, some routes will be unreachable. In this case, the network administrator has to modify the static routes manually.

While configuring a static route, you can specify either the output interface or the next hop address as needed. The next hop address cannot be a local interface 's IP address; otherwise, the route configuration will not take effect.

Actually, it is necessary to identify next hop addresses for all route entries because the router needs to use the next hop address of a matching entry to resolve the corresponding link layer address.

4.8.2.3 Configuring Static Route Displaying Static Route



1. Select Advance > Layer3 > Static Route in the navigation area to enter Static Route displaying

page as shown in Figure 4-43. Table 4-29 describes the configuration items of static Route.

Figure 4-43 Cre	eating a new Static ARP		
Static Route	-		0 × 1
Static Route			
+ <u>Add</u>			
Prefix	Next Hop	Description	Action

Table 4-29 Descriptions of Static Route

Items	Description
Profix	Routing prefix address, or routing network segment; for example, common route 0.0.0.0/0
FIEIIX	192.168.1.1, the prefix IP is 0.0.0.0
Next Hop	Next hop IP address of the route
Description	Route description information, optional configuration
Action	Delete or modify

Creating new Static Route

1. Select **Configuration** > **VLAN** in the navigation area to create VLAN ID.

2. Select Configuration > Port > Port Configuration > L3 port in the navigation area to create L3

SVI port as shown in Figure 4-44.

Figure 4-44 Creating a L3 SVI port

Port Configuration					Q ~ E
L3 Port					
<u> Add</u>					» Port Statistics
Name	IPv4/Mask	IPv6/Mask	Description	Action	
vlan1	192.168.56.166/24			Edit Delete	

3. Select Advance > Layer3 > Static Route in the navigation area to enter Static Route page,

click +Add button to enter the crating page as shown in Figure 4-45.

4. Configure the Prefix and Next Hop.

5. Click **OK** button to complete the configuration.

Figure 4-45 Creating a new Static ARP



Static Route	>	< ×
* Prefix:		
* Next Hop:		
Description:		

NOTE:

F

 When adding a new SVI port, the default management IP address will be automatically deleted. Please ensure that the new SVI port can continue to be accessed.



5 Maintenance

5.1 System Configuration

The system configuration module provides host name settings, services of Telnet, SSH, HTTP, HTTPS, and management IP setting.

5.1.1 Host name settings

Select **Maintenance** > **system configuration** from the navigation area to enter the system configuration page, as shown in Figure 5-1. User can set the host name of the switch here.

Figure 5-1 Management Information page

System Configuration		
Host name:	SWITCH	

5.1.2 Services Enable

The service management module provides the following types of services: FTP, Telnet, SSH, SFTP, HTTP and HTTPS. You can enable or disable the services as needed. In this way, the performance and security of the system can be enhanced, thus secure management of the device can be achieved.

Telnet Server

The Telnet protocol is an application layer protocol that provides remote login and virtual terminal functions on the network.

SSH Server

Secure Shell (SSH) offers an approach to securely logging in to a remote device. By encryption and strong authentication, it protects devices against attacks such as IP spoofing and plain text password interception

HTTP Server

The Hypertext Transfer Protocol (HTTP) is used for transferring web page information across the Internet. It is an application-layer protocol in the TCP/IP protocol suite. You can log in to the device using the HTTP protocol with HTTP service enabled, accessing and controlling the device with Web-based network management.

HTTPS Server

The Secure HTTP (HTTPS) refers to the HTTP protocol that supports the Security Socket Layer (SSL) protocol. The SSL protocol of HTTPS enhances the security of the device in the following ways:

• Uses the SSL protocol to ensure the legal clients to access the device securely and prohibit the illegal clients;



• Encrypts the data exchanged between the HTTPS client and the device to ensure the data security and integrity, thus realizing the security management of the device;

• Defines certificate attribute-based access control policy for the device to control the access right of the client, in order to further avoid attacks from illegal clients.

Configuring service

(1) Select **Maintenance** > **system configuration** from the navigation area to enter the system configuration page, as shown in Figure 5-2.

(2) Check the box in front of the services, Click **Apply** button to enable service.

(3) When HTTPS Server is enabled, the certificate and private key should be uploaded. If no certificate is specified, the device will use the default certificate.



5.1.3 Management IP

(1) Select **Maintenance** > **system configuration** from the navigation area to enter the system configuration page, as shown in Figure 5-3. Table 5-1 lists the configuration items of the Management IP Address.

Figure 5-3 Management Information page

č	Management IP
VID:	1 ~
IPv4 Type:	None Static DHCP
* IPv4 Address:	192.168.64.102
* IPv4 Mask:	255.255.255.0
* IPv4 Gateway:	192.168.64.1
IPv6 Type:	None Static DHCP
* IPv6 Address:	
* IPv6 Prefix Length:	0 ~
* IPv6 Gateway:	

Table 5-1 Management Information configuration items

Item	Description
VID	Specify the management VLAN ID.
	The default management VLAN is 1.



	None: IPv4 management address is not used.
IPv4 Type	Static: Select this option to manually specify an IPv4 address and the mask length
	DHCP: Select the option to get an IPv4 address through DHCP.
IPv/ Addross	Specify the IPv4 management address.
II V4 AUGIESS	The default IP is 192.168.56.166.
IPv/ Mask	Specify the IPv4 management mask.
11 V4 MUSK	The default mask is 255.255.255.0.
IPv4 Catoway	Specify the IPv4 management gateway.
IF V4 Galeway	The default gateway is 192.168.56.1.
	None: IPv6 management address is not used.
IPv6 Type	Static: Select this option to manually specify an IPv6 address and the mask length.
	DHCP: Select the option to get an IPv6 address through DHCP.
IPv6 Address	Specify the IPv6 management address.
IPv6 Prefix Length	Specify the IPv6 management address prefix length.
IPv6 Gateway	Specify the IPv6 management gateway.

5.2 File Management

The file management module includes basic information, image management, configuration management, certificate management, and page package management functions.

5.2.1 Basic Information

Select **Maintenance** > **File Management** > **Basic Information** from the navigation area to enter the page as shown in Figure 5-4. In the basic information page, you can view the usage of each partition of the device, and click the **Clean** button to clear the system log.



5.2.2 Image Management

Software upgrade allows you to obtain a target application file from the current host and set the file as the main boot file or backup boot file to be used at the next reboot.



NOTE:

 A software upgrade takes some time. Do not perform any operation on the web interface during the upgrading procedure; otherwise, the upgrade operation may be interrupted.

1.Select **Maintenance** > **File Management** > **Image Management** from the navigation area to enter the page as shown in Figure 5-5.

Figure 5-5 Image Mana	agement page				
Image Management Configuration M		inagement	Certificate Management		Page Package Management
	Images:	Name	Version	Action	
	active	release/6.0.0 (r503 437fd29) 2022-09-15 12:38:48			
	standby	release/6.0.0 (r501 c427091) 2022-09-06 14:02:16	4		
	Upgrade:	Click	亡 or drag file to this area to uplo	bad	

2. Click **Upgrade** button, In the pop-up dialog box, select the upgrade file corresponding to the device, the upgrade file is *.bin format, and the upgrade process is shown in Figure 5-6. After upgrade finished, the device will be rebooted.

Figure 5-6 Flash new firmware image page

Upgrade:	ٹ Click or drag file to this area to upload	
	ر lite-release-6.0.0.bin	

5.2.3 Configuration Management

Select **Maintenance** > **File Management** > **Image Management** from the navigation area to enter the page as shown in Figure 5-7.

Figure 5-7 Configuration File Management page



Image Management	Configuratio	on Management	Certificate Management	Page Package Management
		占 Backup configuration	Reset to factory defaults	
R	lestore configurat	ion: Click or drag	む file to this area to upload	

Backup configuration

Click the **Backup configuration** button, a file download dialog box appears. You can save the file locally.

Restore configuration

After you click the **Choose File** button in this figure, the file upload dialog box appears. You can select the *. conf file to be uploaded, then the device will be reboot.

Reset to Factory Defaults

This operation restores the system to factory defaults, delete the current configuration file, and reboot the device. Click the **Reset to Factory Defaults** button to apply this operation.

5.2.4 Configuration Management

When you enable HTTPS, you need to upload the certificate and private key, as shown in Figure 5-8. If you do not specify a certificate, the device uses the default certificate.

Figure 5-8 Configurat	ion File Mana	gement page	e	
Image Management	Configuration Ma	anagement	Certificate Management	Page Package Management
	Certificate File :	Click or drag	土 file to this area to upload	
	Private Key File :	Click or drag	上 file to this area to upload	

5.2.5 Page Package Management

The page package management module provides the ability to obtain the target page package file from the local host and apply the file as a device page package file, as shown in Figure 5-9.

Figure 5-9 Configuration File Management page



Image Management	Configuration Ma	inagement	Certificate Managemer	nt	Page Package Management
	Upgrade package:	Click or drag	上 file to this area to upload		

5.3 User Management

In the user management part, you can:

- Set the username, password.
- Create a new user.

Select **Maintenance** > **User Management** from the navigation area to enter the User Management page, as shown in Figure 5-10. Table 5-2 lists the configuration items of the User Management.

Figure 5-10 User Management page

User Management	0 ~
+ <u>Add</u>	
User Name	Action
admin	Edit

Table 5-2 Account configuration items

TUDIE 5-2 ACCOU	ni coniiguiaii	on liens
Item		Description
	Name	User name
Account	Edit	Click to change the password
///////	Delete	Click to delete the user account
	+Add	Click to create a new user

5.4 Time Management

The system time module allows you to display and set the device system time on the Web interface. The device supports setting system time through manual configuration and automatic synchronization of NTP server time.

An administrator cannot keep time synchronized among all the devices within a network by changing the system clock on each device, because this is a timeconsuming task and cannot guarantee clock precision.

Defined in RFC 1305, the Network Time Protocol (NTP) synchronizes timekeeping among distributed time servers and clients. NTP allows quick clock synchronization within the entire



network and ensures a high clock precision so that the devices can provide diverse applications based on consistent time.

5.4.1 View the system time

Select **Maintenance** > **Time Management** from the navigation area to enter the time management page, as shown in Figure 5-11. The current system time and clock status are displayed. Table 5-3 shows the network time configuration items.

Figure 5-11 System time configuration page

Time Management		0 × Ħ
Clock:	1970/1/1 05:39:25	
Time Zone:	UTC V	
Enable NTP:		
* NTP Server:		
* NTP Server:		

Table 5-3 System time configuration items

ltem	Description
Clock	System date and time
Time Zone	Choose time zone
Enable NTP	Enable \Disable NTP
NTP Server	Set the NTP server IP address

5.4.2 Configuring System Time

1. Select **Maintenance** > **Time Management** from the navigation area to enter time management page.

2. Click synchronous button^O behind clock, then click **Apply** button, as shown in Figure 5-12. The

time of the pc will be synchronized to the switch.

3. Click **Save** of the auxiliary area.

Figure 5-12 System time co	nfiguration page	
Clock:	1970/1/1 05:55:48 🔿 🥆	
Time Zone:	UTC	~
Enable NTP:		
	✓ Apply 🛗 Reset	

5.4.3 Configuring NTP Server



1. Select **Maintenance** > **Time Management** from the navigation area to enter time management page.

- 2. Enable NTP
- 3. Type **202.120.2.101** in the NTP Server IP box, as shown in Figure 5-13, click **Apply**.
- 4. Click **Save** of the auxiliary area.

Figure 5-13 NTP Server	Time configuration page	
Clock:	2022/9/16 16:26:17	
Time Zone:	UTC V	
Enable NTP:		
		_
* NTP Server:	202.120.2.101	
		-
	✓ Apply 🖨 Reset	

5.5 SNMP

Simple Network Management Protocol (SNMP) offers the communication rules between a management device and the managed devices on the network; it defines a series of messages, methods, and syntaxes to implement the access and management from the management device to the managed devices. SNMP has the following characteristics:

- Automatic network management. SNMP enables network administrators to search and modify information, find and diagnose network problems, plan for network growth, and generate reports on network nodes.
- SNMP shields the physical differences between various devices and thus realizes automatic management of products from different manufacturers. Offering only the basic set of functions, SNMP makes the management tasks independent of both the physical features of the managed devices and the underlying networking technology. Thus, SNMP achieves effective management of devices from different manufacturers, especially in small, high-speed, and low-cost network environments.

SNMP mechanism

An SNMP enabled network comprises Network Management Station (NMS) and agent.

- An NMS is a station that runs the SNMP client software. It offers a user-friendly interface, making it easier for network administrators to perform most network management tasks.
- An agent is a program on the device. It receives and handles requests sent from the NMS. Only under certain circumstances, such as interface state change, will the agent inform the NMS. NMS manages an SNMP enabled network, whereas agents are the managed network device. NMS and agents exchange management information through the SNMP protocol.

SNMP provides the following four basic operations:


- Get operation: NMS gets the value of a certain variable of the agent through this operation.
- Set operation: NMS can reconfigure the value of one or more objects in the agent MIB (Management Information Base) by means of this operation.
- Trap operation: The agent sends traps to the NMS through this operation.
- Inform operation: The NMS sends traps to other NMSs through this operation.

SNMP Configuration

(1) Select Maintenance > SNMP from the navigation area to enter the SNMP page, as shown in

Figure 5-15.

(2) Select the SNMP version, configure the user, authentication encryption password, Trap host, and click the **Apply** button to complete the configuration.

Figure 5-15 SNMP configur	ation p	bage						
Version:	None	V2	V3					
* User:								
* Authentication Password:								
* Encrypt Password:								
* Trap Hosts:						1		
		~	Apply	ė i	Reset			



6 Diagnosis

6.1 Network Utilities

6.1.1 Overview

Ping

You can use the ping function to check whether a device with a specified address is reachable, and to examine network connectivity. A successful execution of the ping command involves the following steps:

1. The source device sends an ICMP echo request (ECHO-REQUEST) to the destination device.

2. The destination device responds by sending an ICMP echo reply (ECHO-REPLY) to the source device after receiving the ICMP echo request.

3. The source device displays related statistics after receiving the reply. Output of the ping command falls into the following:

• The ping command can be applied to the destination's host name or IP address. If the destination's host name is unknown, the prompt information is displayed.

• If the source device does not receive an ICMP echo reply within the timeout time, it displays the prompt information and the statistics during the ping operation. If the source device receives an ICMP echo reply within the timeout time, it displays the number of bytes of the echo reply, the message sequence number, Time to Live (TTL), the response time, and the statistics during the ping operation. Statistics during the ping operation include number of packets sent, number of echo reply messages received, percentage of messages not received, and the minimum, average, and maximum response time.

Traceroute

By using the traceroute command, you can display the Layer 3 devices involved in delivering a packet from source to destination. This function is useful for identification of failed node(s) in the event of network failure.

The traceroute command involves the following steps in its execution:

1. The source device sends a packet with a TTL value of 1 to the destination device.

2. The first hop (the Layer 3 device that first receives the packet) responds by sending a TTL-expired ICMP message to the source, with its IP address encapsulated. In this way, the source device can get the address of the first Layer 3 device.

3. The source device sends a packet with a TTL value of 2 to the destination device.

4. The second hop responds with a TTL-expired ICMP message, which gives the source device the address of the second Layer 3 device.



This process continues until the ultimate destination device is reached. In this way, the source device can trace the addresses of all the Layer 3 devices involved to get to the destination device.

The traceroute command can be applied to the destination's host name or IP address. If the destination's host name is unknown, the prompt information is displayed

6.1.2 Diagnostic tool operations

ping operation

1. Select **Diagnosis** > **Network Utilities** from the navigation tree to enter the IPv4&IPv6 Ping configuration page.

2. Type the IPv4/IPv6 address of the destination device in the text box, as shown in Figure 6-1.

3. Click **PING** to execute the ping command, and you can see the result in the box below, as shown in Figure 6-2.

Figure 6-1 Network Utilities page					
Network Utility					0 × 1
Type:	Ping	Traceroute	Ping6	Traceroute6	
* IP:	192.168.	.56.20		0	
		✓ Apply	/ 💼	Reset	

Figure 6-2 The ping result

Result:	PING 192.168.56.20 (192.168.56.20) 56(84)
	bytes of data.
	64 bytes from 192.168.56.20: icmp_req=1
	ttl=128 time=1.04 ms
	64 bytes from 192.168.56.20: icmp_req=2
	ttl=128 time=0.859 ms
	64 bytes from 192.168.56.20: icmp_req=3
	ttl=128 time=0.986 ms
	64 bytes from 192.168.56.20: icmp_req=4
	ttl=128 time=0.892 ms
	64 bytes from 192.168.56.20: icmp_req=5
	ttl=128 time=0.821 ms
	192.168.56.20 ping statistics
	5 packets transmitted, 5 received, 0% packet
	loss, time 4000ms
	rtt min/avg/max/mdev =
	0.821/0.920/1.046/0.091 ms

Traceroute operation

- 1. Select **Diagnostic > Network Utilities** from the navigation tree.
- 2. Type the destination IP address in the text box.



3. Click **TRACEROUTE** to execute the trace route command, and you see the result in the box

below, as shown in Figure 6-3.

```
Figure 6-3 The trace route result

Result: traceroute to 163.177.151.110

(163.177.151.110), 20 hops max, 60 byte

packets

1 192.168.1.1 0.598 ms

2 100.69.0.1 3.784 ms

3 218.104.224.29 3.628 ms

4 218.104.229.66 16.026 ms

5 218.104.229.37 24.969 ms

6 *

7 120.83.0.86 20.729 ms

8 120.80.137.202 21.808 ms
```

6.2 Optical Transceiver Information

Optical fiber is commonly used for long distance data transmission. However, when link issues occur, it is very costly to troubleshoot fiber cables and fiber transceivers at remote sites. To solve this problem, Moxa industrial Ethernet switches provide digital diagnostics and monitoring (DDM) functions on SFP optical fiber links and allow users to measure optical parameters and its performance from a central site. This function can greatly facilitate the troubleshooting process for optical fiber links and reduce costs for onsite debugging.

6.2.1 Displaying Optical Transceiver Information

Select **Diagnosis** > **Optical Transceiver Information** from the navigation area. The system automatically displays the optical transceiver information, as shown in Figure 6-4. Table 6-1 describes the optical transceiver information items.

Igure o-4 optical indisceiver information									
Transceiver Information							(\sim	
Name	State	Transceiver Status	Temperature(°C)	Voltage(V)	Current(mA)	RX Power(dBm)	TX Power(dBm)	Actio	n
gigabitEthernet0/9	Down	ОК	58(OK)	3.2104(OK)	18.07(OK)	-40(ALARM)	-5.5(OK)	<u>Detai</u>	
gigabitEthernet0/10	Down	Transceiver absent	NA	NA	NA	NA	NA	<u>Detail</u>	

Figure 6-4 optical transceiver information

Table 6-1 optical transceiver information items

Item	Description
Name	Switch port number that the SFP is plugged into.
State	The state of the fiber interface, up/down.
Transceiver State	The absent of the transceiver.



Temperature(degree)	SFP casing temperature
Voltage(V)	Voltage supply to the transceiver.
Current(mA)	Current consumed by transceiver.
Rx Power(dBm)	The amount of light being received from the fiber optic cable
TX Power(dBm)	The amount of light being transmitted into the fiber optic cable
Detail	Click to show the detail information of the transceiver.

6.2.2 Displaying detail information

Click **DETAIL** of the interface to enter the page of transceiver detail information. as shown in Figure 6-5.

Figure 6-5 transceiver detail information gigabitEthernet0/9

Transceiver Type: 1000BASE-LH-SFP

Connector Type: LC

Wavelength(nm): 1310

Link Length: SMF fiber(km): 20

Digital Diagnostic Monitoring: true

Alarm: RX Channel power low; RX Channel loss of signal

Vendor Serial Number: PQH429J

Vendor Name: OEM

Vendor OUI: 009065

Vendor Part Number: BL3412-20D-HW

Vendor Revision: 1.1

Manufacturing Date: 180927

Encoding: 8B10B

6.3 One-click Collection

Each functional module has its own running information, and generally, you need to view the output information for each module one by one. To receive as much information as possible in one operation during daily maintenance or when system failure occurs, the diagnostic



information module allows you to save the running statistics of multiple functional modules to a file, and then you can locate problems faster by checking this file.

1. Select **Diagnosis** > **One-click Collection** from the navigation area to enter the page as shown in Figure 6-6.

2. When you click **One-click Collection** button, the system begins to generate the diagnostic information file, and after the file is generated, the File Download dialog box appears. You can save this file to the local host.

Figure 6-6 Backup log page

⊡	Diagnosis ∨ / One-clio	k Collection
On	e-click Collection	
Ŀ	One-click Collection	

6.4 Dying Gasp

6.4.1 Overview

The networking devices rely on a temporary back-up power supply on a capacitor, that allows for a graceful shutdown and the generation of the dying-gasp message. This temporary power supply is designed to last from 10 to 20 milliseconds to perform these tasks.

According to the definition in 802.3ah, when a device power failure event occurs, the device sends an OAM event message to its connected device. Since OAM is a point-to-point protocol, the power failure event message will not be sent to the next device that supports OAM. Continue to forward again. The device that receives a power failure event will output a power failure LOG prompt message.

In addition to the OAM alarm information, the power-off device will also send a trap message to the smmp server.

Node information	Data
Mib files	DOT3-OAM-MIB.mib
oid	1, 3, 6, 1, 2, 1, 158, 1, 6, 1, 4
value	dyingGaspEvent(257)

6.4.2 Configuring Dying Gasp

1. Select **Diagnosis** > **Dying gasp** from the navigation area to enter the page of dying gasp configuration page, as shown in Figure 6-7.

2. Select the box of dying gasp, click **Apply** button to enable dying gasp.

Figure 6-7 Dying gasp configuration page



Dying Gasp	D ~ E
Dying gasp	
Dying gasp	
V Apply	

6.5 Cable Detect



Only electrical ports support this command

Performing this operation will cause the already Up port to automatically go Down and Up again. When the line length is less than 6 meters, there is a deviation between the test results and the actual value.

Cable detection means that users can detect the current status of the cable connected to the Ethernet interface on the device, and the system will return the detection results within 5 seconds. The detection content includes whether there is a short circuit or open circuit in the cable and the length of the faulty cable.

Step 1: Select **Diagnosis** > **Cable Detect** in the navigation bar to enter the cable detection page, as shown in Figure 6-8.

Step 2: Select the interface to be tested, click the **Detect** button to start the incoming line test, and the system will return the test results within 5 seconds.

Step 3: As shown in Figure 6-9, view the detection results on the pop-up page.

Figure 6-8 Cable Detection Page Cable Detect

Only co	Only copper ports support this function. When a port that works normally performs the cable detection function, it will cause the port to be Up/Down.							
Port E	Detection Detection details(Last)							
Batch	Detect							
	Name	Admin State	Media Mode	State	Action			
	gigabitEthernet0/1	No shutdown	RJ45	Down	Detect			
	gigabitEthernet0/2	No shutdown	RJ45	Down	Detect			
	gigabitEthernet0/3	No shutdown	RJ45	Down	Detect			
	gigabitEthernet0/4	No shutdown	RJ45	Down	Detect			

Figure 6-9 detection results



🖭 Diagr	nosis Y / Cable Detect			gigabitEthernet0/6	
Cable Dete	et .			Pair A length(meters):	99
Only cop	Detect	Pair B length(meters):	100		
				Pair C length(meters):	101
Port D	etection Detection details(Last)			Pair D length(meters):	100
Batch D	Name	Admin State	Media Mode	Pair A state :	Open
	gigabitEthernet0/1	No shutdown	RJ45	Pair B state:	Open
	gigabitEthernet0/2	No shutdown	RJ45	Pair C state:	Open
	gigabitEthernet0/3	No shutdown	RJ45	Pair D state:	Open

Note

K

Pair X length: unit meter, cable length, in case of fault, the length from the interface to the fault location Pair X status:

OK (normal): Indicates that the line pair (PAIR) is terminated normally

Open: Indicates that the line pair is open

Short: Indicates a short circuit on the pair

Unknown: Other unknown causes of failure