
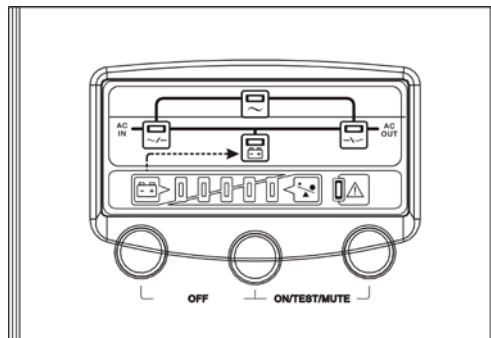


USER'S MANUAL

On-Line 1K-3KVA Uninterruptible Power Supply

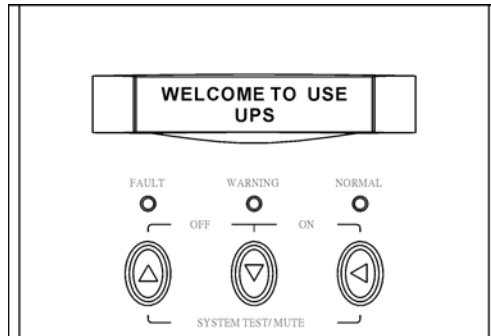

CONTENTS

| | |
|-------------------------------------|----|
| 1. INTRODUCTION | 1 |
| 2. SAFTY INSTRUCTION..... | 2 |
| 3. CABLE CONNECTION..... | 4 |
| 4. SYSTEM DESCRIPTION..... | 5 |
| 5. UPS OPERATION | 12 |
| 6. TROUBLE SHOOTING GUIDE..... | 18 |
| 7. OPERATION MODES OF THE UPS | 24 |
| 8. COMPUTER INTERFACE | 26 |

1. INTRODUCTION

1.1 General Description

The continuity of electrical power is an essential requirement for critical load operations. The Uninterruptible Power System (UPS) is designed to meet the user's need of present computer, server and the equipment of office automation that make the UPS more compact and less noisy.

To choose the UPS as your equipment protector is a wise investment because it supplies reliable, pure and stable power at affordable price.

1.2 Key features

1. Multiple microprocessor and double-conversion design base.
2. Wide input range designed to operate under harsh environment.
3. High input power factor and DC-start function.
4. LED and LCD display for detail status and data; real-time alarm silence.
5. Enhanced protections against light, surges, and disturbance etc.
6. Remote monitoring with SNMP intelligent slot and RS-232 interface.
7. Light weight and compact size, easy to transport and place.

1.3 Important Notices

To be sure that the UPS will be operated correctly, the following items should be noticed:

1. Read instructions carefully before operating the UPS.
2. UPS power connect instruction should be followed.
3. Please don't open the case to prevent danger.
4. If the UPS will be stored for long period, the battery must be charged once every 90 days.
5. Retain the load within the rating of UPS to prevent faults.
6. Handle unusual events according to the trouble-shooting guide.
7. Keep the UPS clean and dry.

2. SAFTY INSTRUCTION

2.1 Transporting

1. Disconnect all power cables if necessary.
2. Be careful not to damage the UPS while transporting.
3. Don't move the UPS upside down.
4. Please transport the UPS system only in the original packaging (to protect against shock and impact).

2.2 Positioning

1. Do not put the UPS on rugged or declined surface.
2. Do not install the UPS system near water or in damp environments.
3. Do not install the UPS system where it would be exposed to direct sunlight or near heat.
4. Do not block off ventilation openings in the UPS system's housing and don't leave objects on the top of the UPS.
2. Allow a minimum distance of 10 cm in the rear and two sides of the UPS for ventilation.
4. Keep the UPS far away from heat emitting sources.
6. Do not expose it to corrosive gas.
7. Ambient temperature : 0°C - 40°C

2.3 Installation

1. Connect the UPS system only to an earthed shockproof socket outlet.
2. Do not connect domestic appliances such as hair dryers or office equipment which would overload the UPS system (e.g. laser printers) to UPS output sockets.
3. Place cables in such a way that no one can step on or trip over them.

2.4 Operation

1. Do not disconnect the mains cable on the UPS system or the building wiring socket outlet during operations since this would cancel the protective earthing of the UPS system and of all connected loads.
2. The UPS has its own internal power source (batteries). The output terminals may be live even when the UPS is not connected to the AC supply.
3. Ensure that no fluids or other foreign objects can enter the UPS system.

2.5 Maintenance and Service

1. Caution - risk of electric shock.

Even after the unit is disconnected from the mains power supply (building wiring socket outlet), components inside the UPS system are still connected to the battery and are still electrically live and dangerous. Before carrying out any kind of servicing and/or maintenance, disconnect the batteries and verify that no current is present.

2. Only persons adequately familiar with batteries and with the required precautionary measures may exchange batteries and supervise operations. Unauthorised persons must be kept well away from the batteries.

3. Batteries may cause electric shock and have a high short-circuit current. Please take the precautionary measures specified below and any other measures necessary when working with batteries:

- remove wristwatches, rings and other metal objects
- use only tools with insulated grips and handles.

4. When changing batteries, install the same number and same type of batteries.
5. Do not attempt to dispose of batteries by burning them. This could cause battery explosion.
6. Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes.

3. CABLE CONNECTION

3.1 Inspection

1. The system may be installed and wired only by qualified electricians in accordance with applicable safety regulations.
2. When installing the electrical wiring, please note the nominal amperage of your incoming feeder.
3. Inspect the packaging carton and its contents for damage. Please inform the transport agency immediately should you find signs of damage.
Please keep the packaging in a safe place for future use.
4. Please ensure that the incoming feeder is isolated and secured to prevent it from being switched back on again.

3.2 Connection

1. UPS Input Connection


If the UPS is connected via the power cord, please use a proper socket with protection against electric current, and pay attention to the capacity of the socket.

2. UPS Output Connection

The output of this model is with socket-types only (NEMA or IEC). Simply plug the load power cord to the output sockets to complete connection.

4. SYSTEM DESCRIPTION


4.1 Front Panel Description for LCD Model

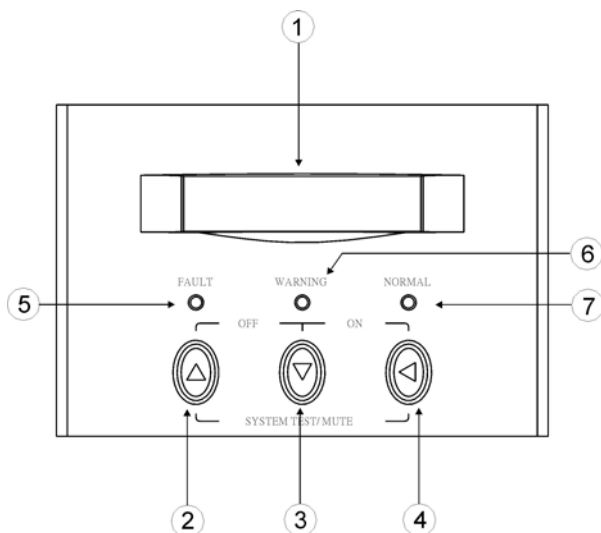

1. LCD Display: This indicates the UPS operation information, including UPS status, input/output voltage, input/output frequency, battery voltage, battery capacity left, output load, inside temperature, and the times of history events.
2. Up-key: Use to select upward the UPS status on LCD Display.
3. Down-key: Use to select downward the UPS status on LCD Display.
Beside, press it simultaneously with the Up-key to switch off the UPS.
4. Enter-Key: It is pressed with the Down-key to turn on the UPS. In battery operation mode, press it with Up-key at the same time to disable the buzzer. Beside, it is pressed to confirm and enter the item selected.
5. Fault LED (red): To indicate the UPS is in fault condition because of inverter shutdown or over-temperature.

6. Warning LED (yellow): To indicate the UPS is in the status of overload, bypass and battery back-up.
7. Normal LED (green): To indicate the UPS is operating normally.

4.2 Front Panel Description for LED Module

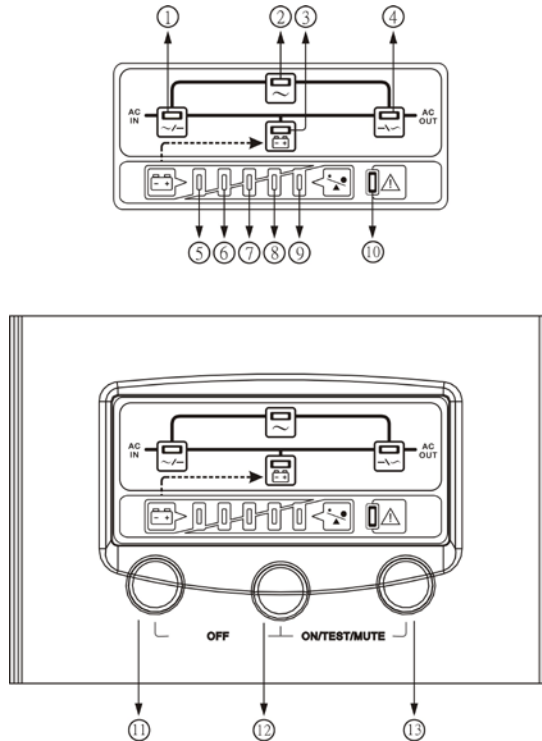

1. Line LED (green): To indicate the AC power is applied to the UPS input. In case this LED blinks, it means the main AC source is out of tolerance.
2. Bypass LED (yellow): To indicate the load is powered via the bypass.
3. Battery LED (yellow): To indicate the UPS is in battery backup mode when the mains power has failed.

4. Inverter LED (green): To indicate the UPS is powered through inverter.

5~9. Load & Battery Capacity LEDs:

(a) No. 5 to 8 LED is green color and No. 9 (used as warning LED for overload or battery low) is yellow.

(b) These LEDs show the load % of the UPS if the mains power is available (in normal operation). LEDs light up to indicate the following information.

No. 5 LED: 0-25 %

No. 5&6&7&8 LEDs: 76-100 %

No. 5&6 LEDs: 26-50 %

No. 5&6&7&8&9 LEDs: Overload

No. 5&6&7 LEDs: 51-75 %

(c) In the battery operation, the LEDs indicate the capacity (%) of the batteries. LEDs light up to indicate the following information.

No. 9 LED: 0-25 % (battery low level)

No. 8&9 LEDs: 26-50 %

No. 6&7&8&9 LEDs: 76-95 %

No. 7&8&9 LEDs: 51-75 %

No. 5&6&7&8&9 LEDs: 96-100 %

10. Fault LED (red): To indicate the UPS is in fault condition because of inverter shutdown or over-temperature


11. OFF key: It should be pressed with the control key simultaneously to switch off the UPS.

12. Control key: this key is pressed simultaneously with OFF or ON/TEST/MUTE key to switch on/off the UPS, do auto-test and disable the buzzer.


13. ON/TEST/MUTE key: It should be pressed with the control key simultaneously to switch on UPS, do UPS auto-test in normal AC mode and turn off the buzzer in battery operation.

4.3 Outline Description

1KVA Tower Case for LCD&LED Model

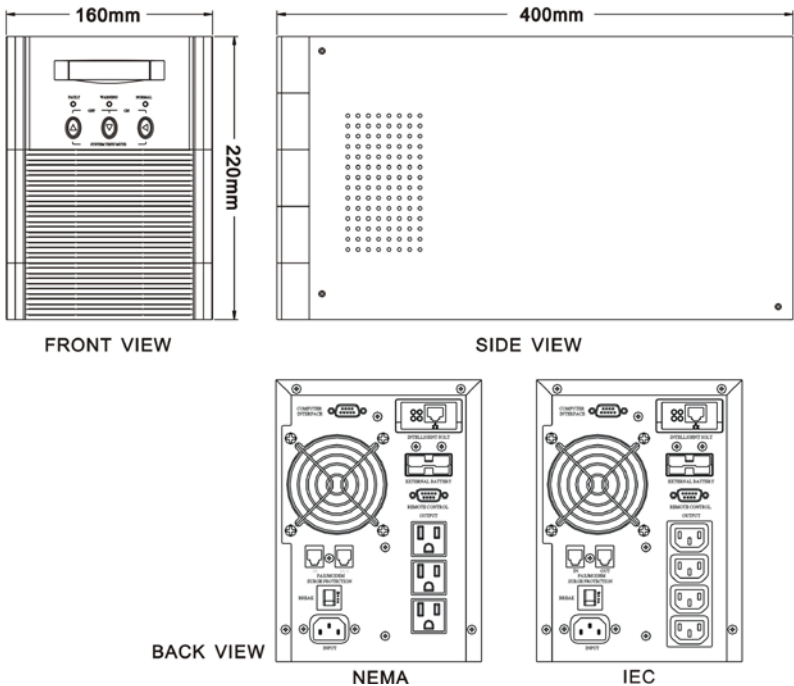


2KVA Tower Case for LCD&LED Model

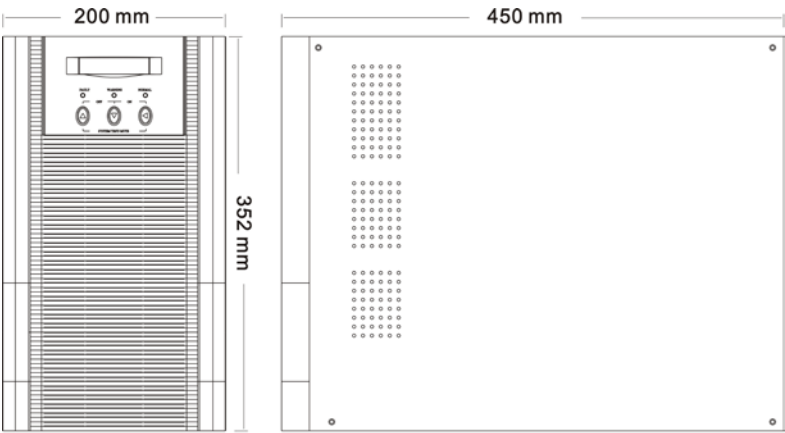

FRONT VIEW

SIDE VIEW

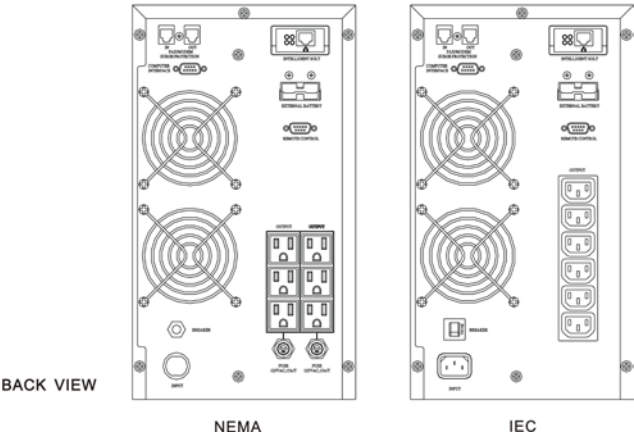


BACK VIEW


NEMA

IEC


3KVA Tower Case for LCD&LED Model

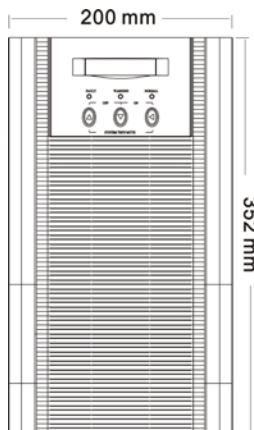


FRONT VIEW

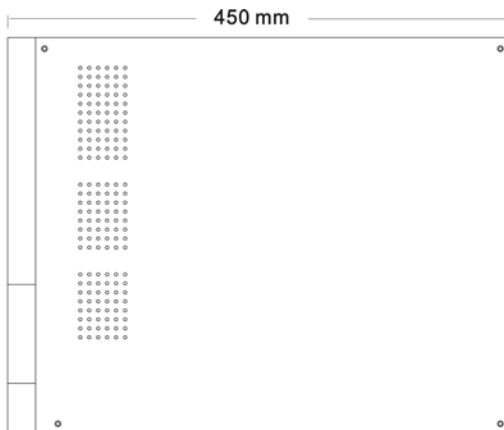

SIDE VIEW

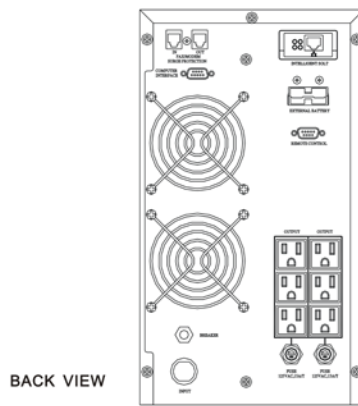


NEMA

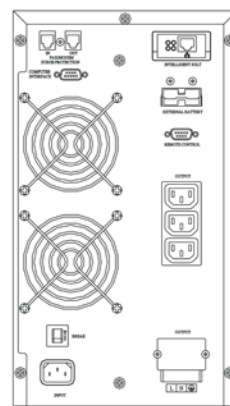


IEC

1K / 2K / 3KVA Rack Mount for LCD&LED Model

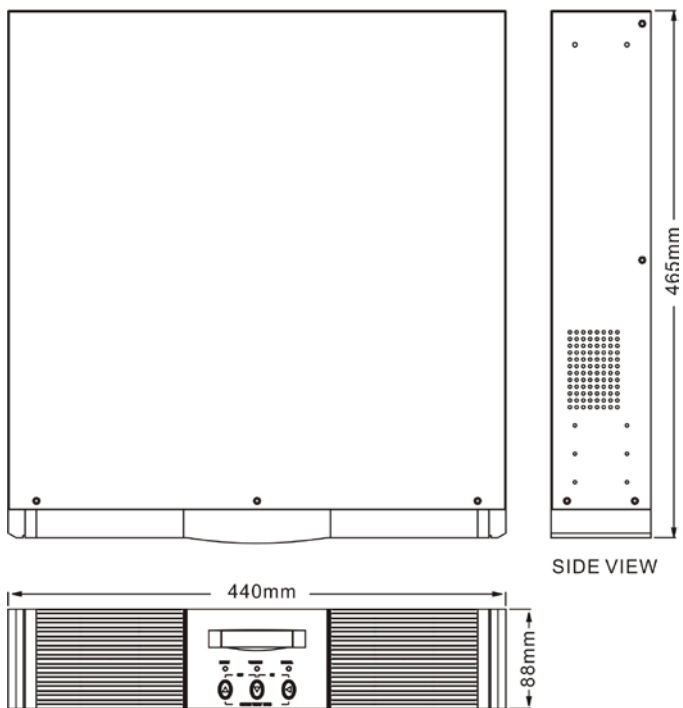


SIDE VIEW

FRONT VIEW

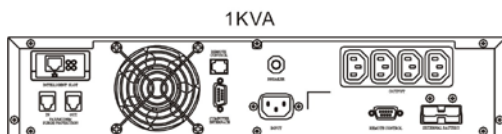

2KVA / 3KVA

 

BACK VIEW

5. UPS OPERATION

5.1 Check Prior to Start Up

1. Ensure the UPS is in a suitable positioning.
2. Check input cord is secured.
3. Make sure the load is disconnected or in the “OFF” position.
4. Check if input voltage meets the UPS rating required.


5.2 Storage Instruction

Disconnect input power in rear panel if you will not use it for long period. If the UPS is stored over 3 months, please keep supplying power to the UPS for at least 24 hours to ensure battery fully recharged.

5.3 Operation Procedure for LCD Model

Please follow the instructions below for UPS operation.

1. Once the AC source is connected, the LCD Display shall light up immediately to display first the main menu of greeting context and the Normal LED is blinking to indicate ready to switch on the inverter.

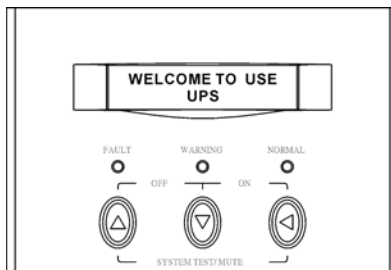


2. By pressing the Enter-key and the Down-key simultaneously for 3 seconds, the UPS will start up after two beeps and Normal LED lights up to indicate the power is from its inverter to the load.
3. When the Down-key and the Up-key are pressed simultaneously for 3 seconds, the inverter will be turned off after two beeps and the UPS is on the standby status (LCD display illuminates and Normal LED is blinking) until AC source is disconnected.


4. LCD display menu

Use Up/Down key to select menu-displays of the LCD described below. This screen will refresh once the system power is enabled.



Rated Spec

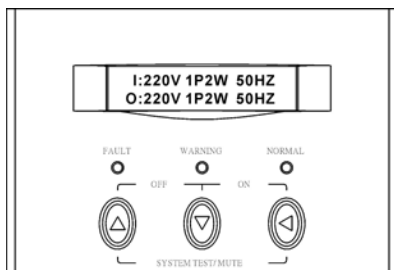



Status

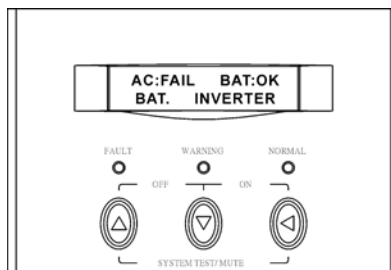



Voltage

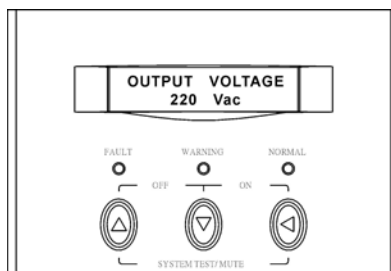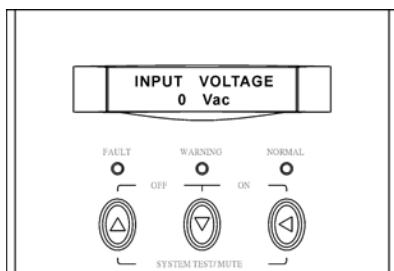


Frequency

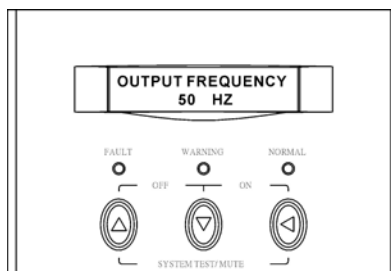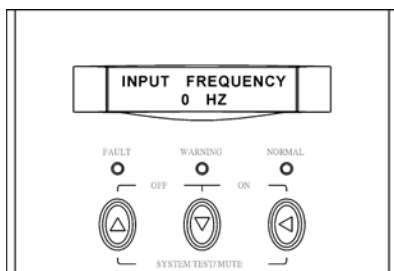


Battery Status

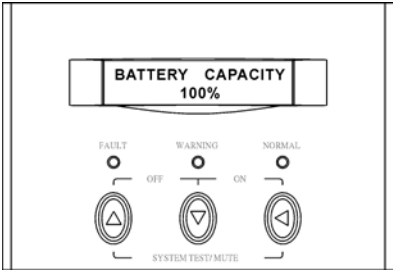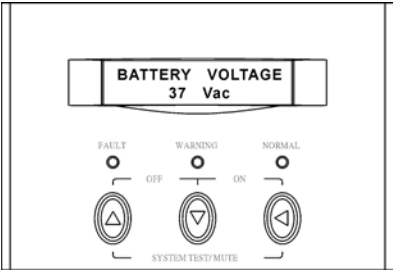



Output Power

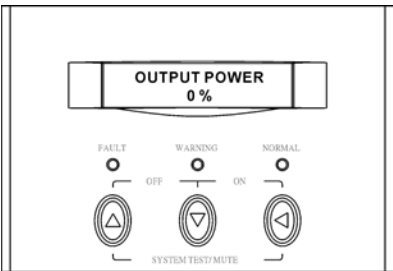

Temperature

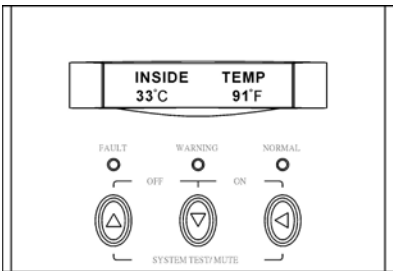

History Record

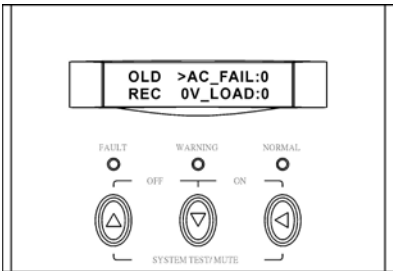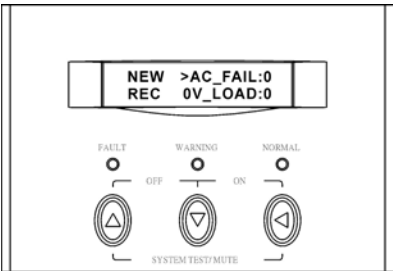


5. Output and bypass setting


Just connect the AC power (don't need to turn on the UPS) and the LCD will light up with the welcome slogan (initial) screen. Then press the Down-key to find the screen and then press Enter-key for setting. Once finished, please disconnect the AC power and then reconnect power again to refresh the setting.

Bypass Range Set


A. To protect the load, the function of bypass auto-transfer is activated only when the AC main voltage is within the range of LO (low) and HI(high). In this screen, press Enter-key to enter the following steps for LO/HI voltage setting.

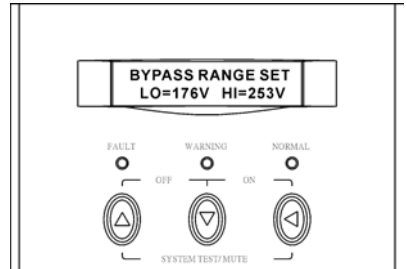

B. The cursor (→) will pop up to indicate the item newly selected. Press Enter-key to get the item of LO or HI range the user want to adjust.

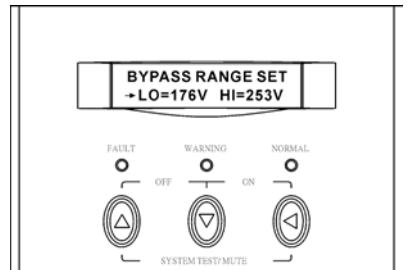


C. Use Up or Down-key to adjust the voltage (changing 1V by every press). LO (low rang):176V+/- 20V, HI(high range):253V+/- 20V).

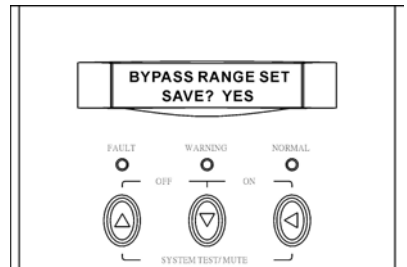


D. Once the value is confirmed, press Enter-key again to save the data.

Output Voltage & Frequency Adjust


- A. In this screen, press Enter-key to enter the following steps for output voltage and frequency adjustment.

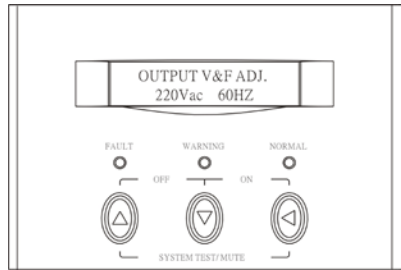

- B. The cursor (→) will pop up to indicate the output voltage and frequency newly selected.

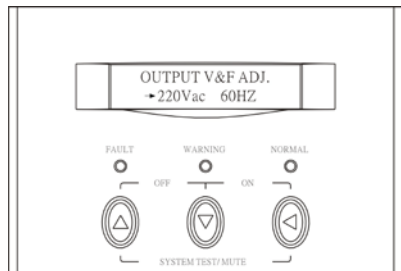

- C. Use Up or Down-key to adjust the output voltage (220V, 230V, and 240V). Press Enter-key to confirm voltage and then the cursor will move to frequency selection. The output frequency (50Hz or 60Hz) can be adjusted by the same key operation.

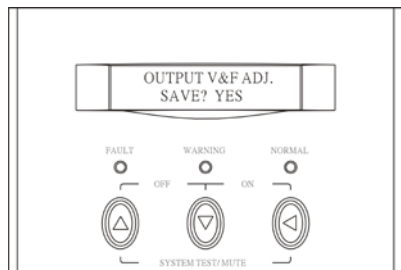


- D. Once the correct voltage is selected, press Enter-key again to save the selection.

5.4 Operation Procedure for LED Model

Please follow the instructions below for UPS operation.



1. Once the AC source is connected, Line LED shall light up immediately to indicate ready to switch on the inverter. In case this LED blinks, it means the main AC source is out of tolerance.
2. Press both of the Control Key and the ON/TEST/MUTE key simultaneously for 3 seconds, the UPS will start up after two beeps and Inverter LED lights up to indicate the UPS is powered through inverter.


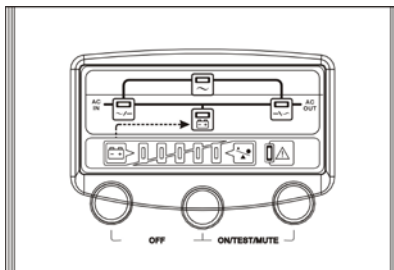




6. TROUBLE SHOOTING GUIDE



6.1 For LCD Model

The following guideline may be helpful for basic problem solving.
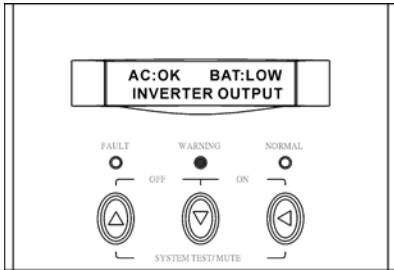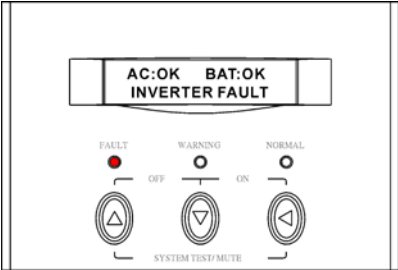
| No. | LED and LCD status | ACTION |
|-----|--|---|
| 1 | <div></div> <p>AC utility power is normal. UPS is running normally, but battery capacity is low (referring to Battery Status Menu). Buzzer beeps once every second for battery low.</p> | Charger may break down. Please replace charger board. |
| 2 | <div></div> <p>AC utility power is normal. The output load is supplied through bypass of AC utility. Fault LED lits up and buzzer beeps continuously.</p> | Please contact your agent for service. |
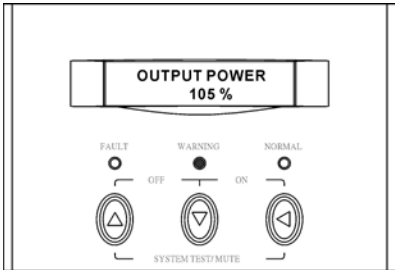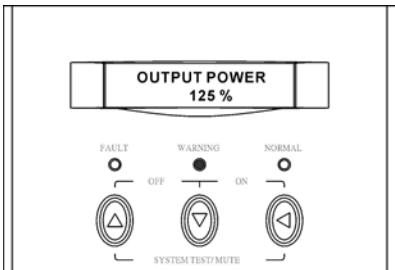
| No. | LED and LCD status | ACTION |
|-----|---|---|
| 3 |  <p>AC utility power is normal but UPS is overloaded. Warning LED lits up and buzzer beeps per second.</p> | Please reduce the critical load to POWER(<100%. |
| 4 |  <p>AC utility power is normal but UPS is overloaded up to 125%. Warning LED does not fade out and buzzer beeps per 0.5 second.</p> | Please reduce the critical load to POWER(<100%. |
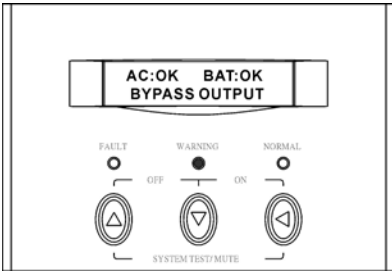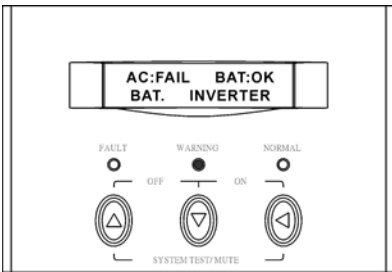
| No. | LED and LCD status | ACTION |
|-----|---|--|
| 5 |  <p>AC utility power is normal, but the load is supplied by AC utility power via bypass. Output power is more than 150% (referring to the Output Power Menu). Warning LED lights up and buzzer beeps continuously.</p> | <p>Please reduce the critical load to $\text{POWER}(\%) < 100\%$.</p> |
| 6 |  <p>AC utility power fails. The full load is supplied by battery power in UPS. Buzzer alarm sounds every 4 seconds.</p> | <p>If AC utility power fails, reduce the less critical load in order to extend backup time. If it is not abnormal power failure, please check the rated input or connected line.</p> |
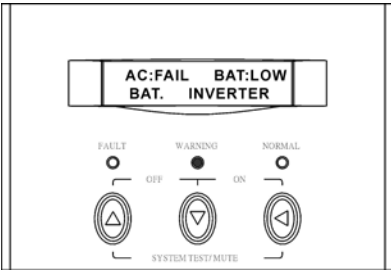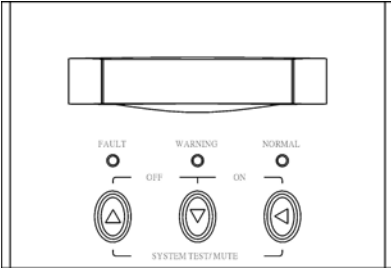
| No. | LED and LCD status | ACTION |
|-----|--|--|
| 7 |  <p>AC utility fails. The load is supplied by UPS in backup mode and battery power is approaching low level. Buzzer alarm beeps every second.</p> | <p>UPS will shut down automatically. Please save data soon.</p> |
| 8 |  <p>AC utility power fails and battery runs out. UPS has shut down automatically.</p> | <p>UPS will restart up when AC utility power is restored. In case AC utility power fails more than 6 hours, please follow storage instruction.</p> |

6.2 For LED Model


The following guideline may be helpful for basic problem solving.

| No. | UPS STATUS | ACTION |
|-----|---|---|
| 1 | AC utility power is normal. UPS is running normally, but battery capacity is low. Buzzer beeps once every second for battery low. | Charger may broke down. Please replace charger board. |
| 2 | AC utility power is normal. The output load is supplied through bypass of AC utility. Fault LED lits up and buzzer beeps continuously. | Please contact your agent for service. |
| 3 | AC utility power is normal but UPS is overloaded. Warning LED lits up and buzzer beeps per second. | Please reduce the critical load to <100%. |
| 4 | AC utility power is normal but UPS is overloaded up to 125%. Warning LED does not fade out and buzzer beeps per 0.5 second. | Please reduce the critical load to <100%. |
| 5 | AC utility power is normal, but the load is supplied by AC utility power via bypass. Output power is more than 150%. Warning LED lits up and buzzer beeps continuously. | Please reduce the critical load to <100%. |

| No. | UPS STATUS | ACTION |
|------------|--|---|
| 6 | AC utility power fails .The load is supplied by battery power. Buzzer alarm sounds every 4 seconds. | If AC utility power fails, reduce the less critical load in order to extend backup time. If it is not abnormal power failure, please check the rated input or connected line. |
| 7 | AC utility fails. UPS is in battery backup mode and battery power is approaching low level. Buzzer alarm beeps every second. | UPS will shut down automatically. Please save data soon. |
| 8 | AC utility power fails and battery runs out. UPS has shut down automatically. | UPS will restart up when AC utility power is restored. If AC utility power failure is more than 6 hours, please follow storage instruction. |


7. OPERATION MODES OF THE UPS

7.1 UPS System Block Diagram

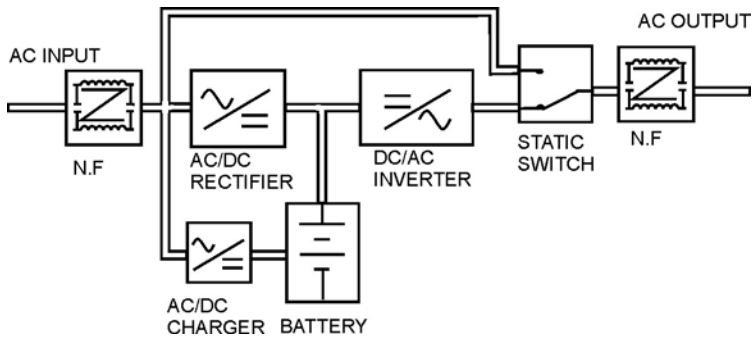


7.2 Normal Operation

There are two main loops when AC utility is normal: the AC loop and the battery charging loop. The AC output power comes from AC utility input and passes through AC/DC rectifier, DC/AC inverter and static switch to support power to load. The battery charging voltage comes from AC utility input and converted by AC/DC charger to support battery-charging power.

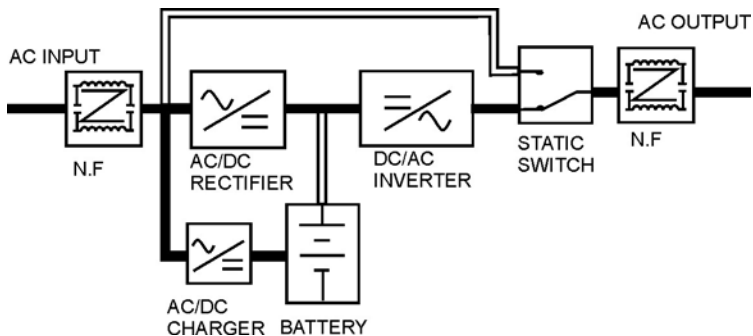

7.3 AC Utility Failure


The AC output comes from battery, passing through DC/AC inverter and static switch within the battery backup time.

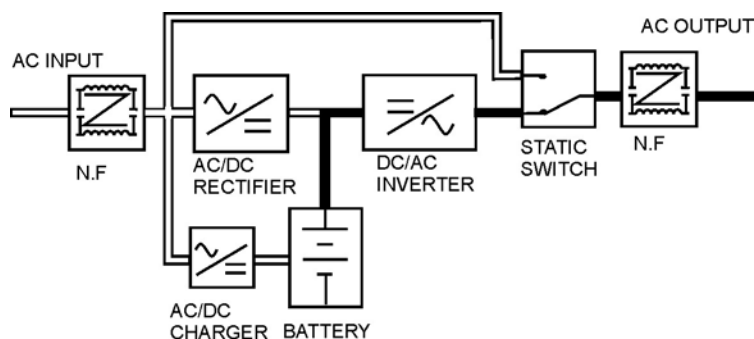

7.4 Bypass Enable

Under the following conditions, the bypass will be enabled:

1. Overload.
2. Inverter failure.
3. Over-temperature

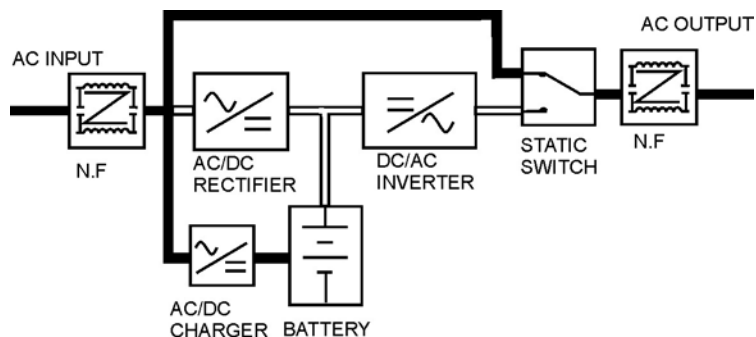

8. COMPUTER INTERFACE

8.1 Communication Interface


The communication interface (DB9 port) on the back of the UPS may be connected to a host computer. The port provides RS-232 for monitoring software (like **UPSilon 2000** of Megatec Company).

The UPS communicates with the computer by sending out RS-232 data streams to one of the serial ports. By this method the user is able to monitor the following parameters.

| | |
|-----------------|---|
| Input Voltage | Indicates the present input voltage to the UPS system when AC power is present. |
| Output Voltage | Indicates the present output voltage of the UPS. |
| AC Frequency | Indicates the actual output frequency of the UPS. |
| Battery Voltage | Indicates the present DC voltage of the UPS battery. |
| Temperature | Indicates the actual temperature inside the UPS. |

8.2 DB9 PIN Assignment

The PIN 2: RS232 RXD, PIN 3: RS232 TXD, and PIN 5: GND. The other PINs have no function.

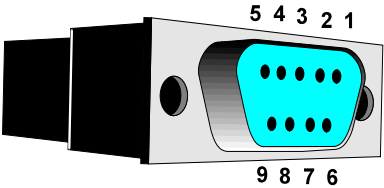

DB9 INTERFACE CONNECTOR

